


Location of Connectors

LOCATION OF CONNECTORS IN ENGINE COMPARTMENT

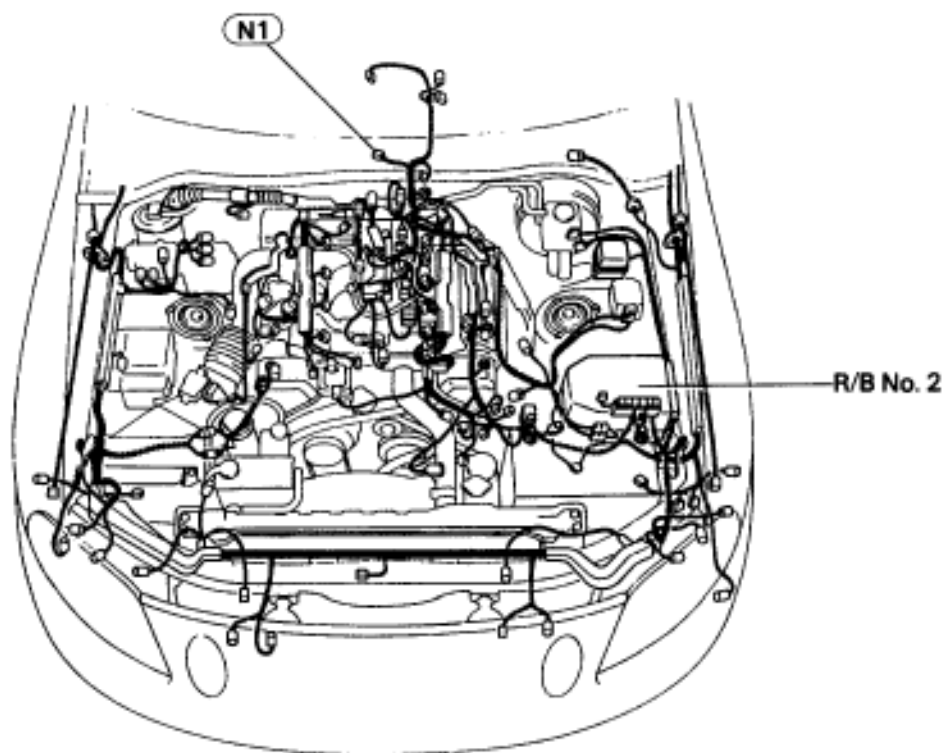


BE6630

N1
Neutral Start SW,
Back-up Light SW
and A/T Indicator SW




SH-9-1-A

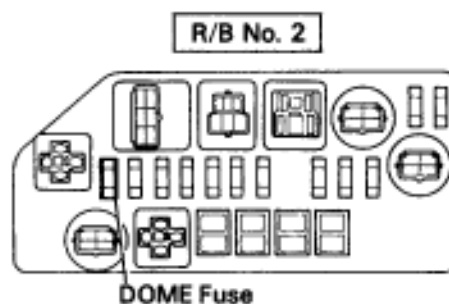

BE6625

LOCATION OF CONNECTORS IN BODY

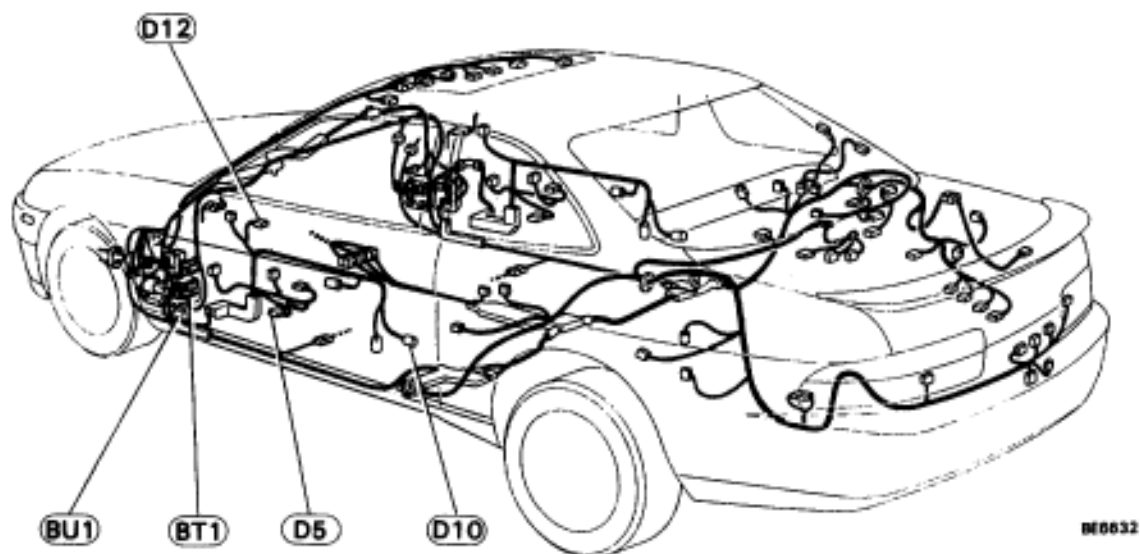**D5**

Door Courtesy Light LH



GA-2-1-B

D10Door Lock Motor,
Door Unlock Detection SW
and Door Open Detection SW


6-6-1-C

D12Driving Position Memory
and Return SW

S-4-1-C

BT1

20-1-B

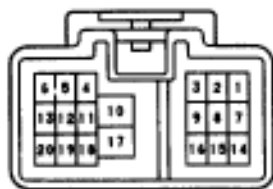

20-2-B


BU1

10-1



10-2

LOCATION OF CONNECTORS IN INSTRUMENT PANEL

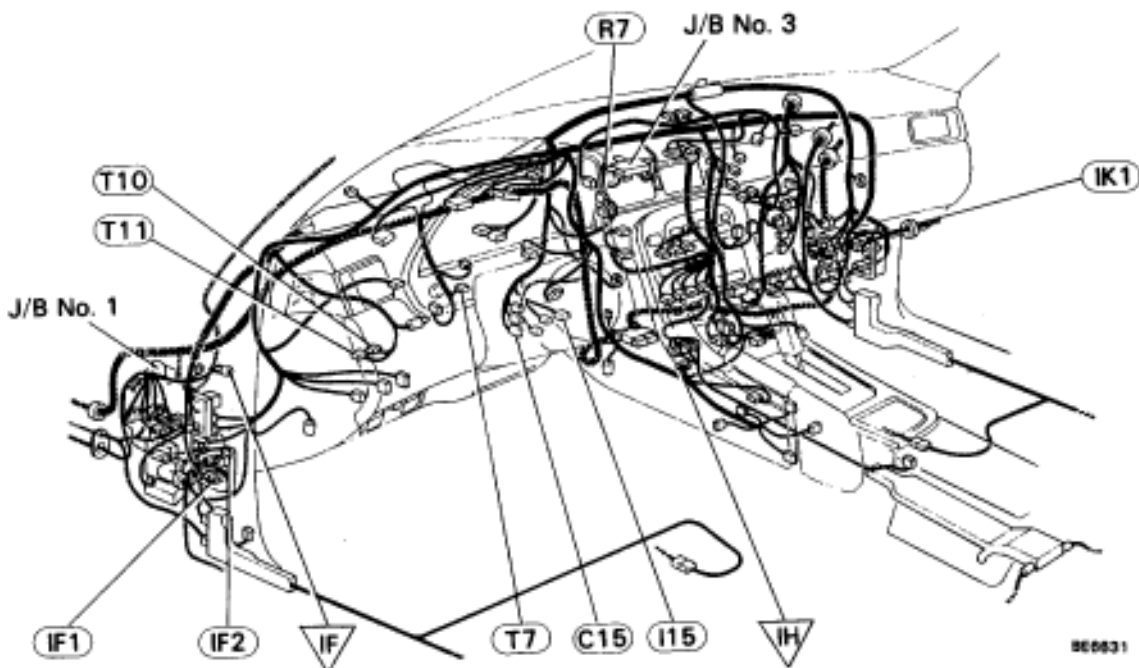

C15
Auto Set Switch, Manual Switch
Tilt Motor, Tilt Position Sensor
(COMB. Switch)



I15
Unlock Warning SW



eg-11-1

R7
Remote Control
Mirror ECU



e-16-1-A

T7
Telescopic Position
Sensor



S-6-1-B

T10
Tilt and Telescopic ECU




e-18-1


T11
Tilt and Telescopic ECU



e-12-1

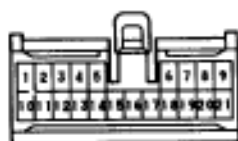IF1


h-21-1

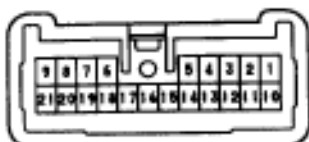IF2


h-21-2




e-20-1

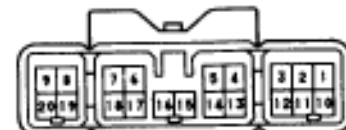


e-20

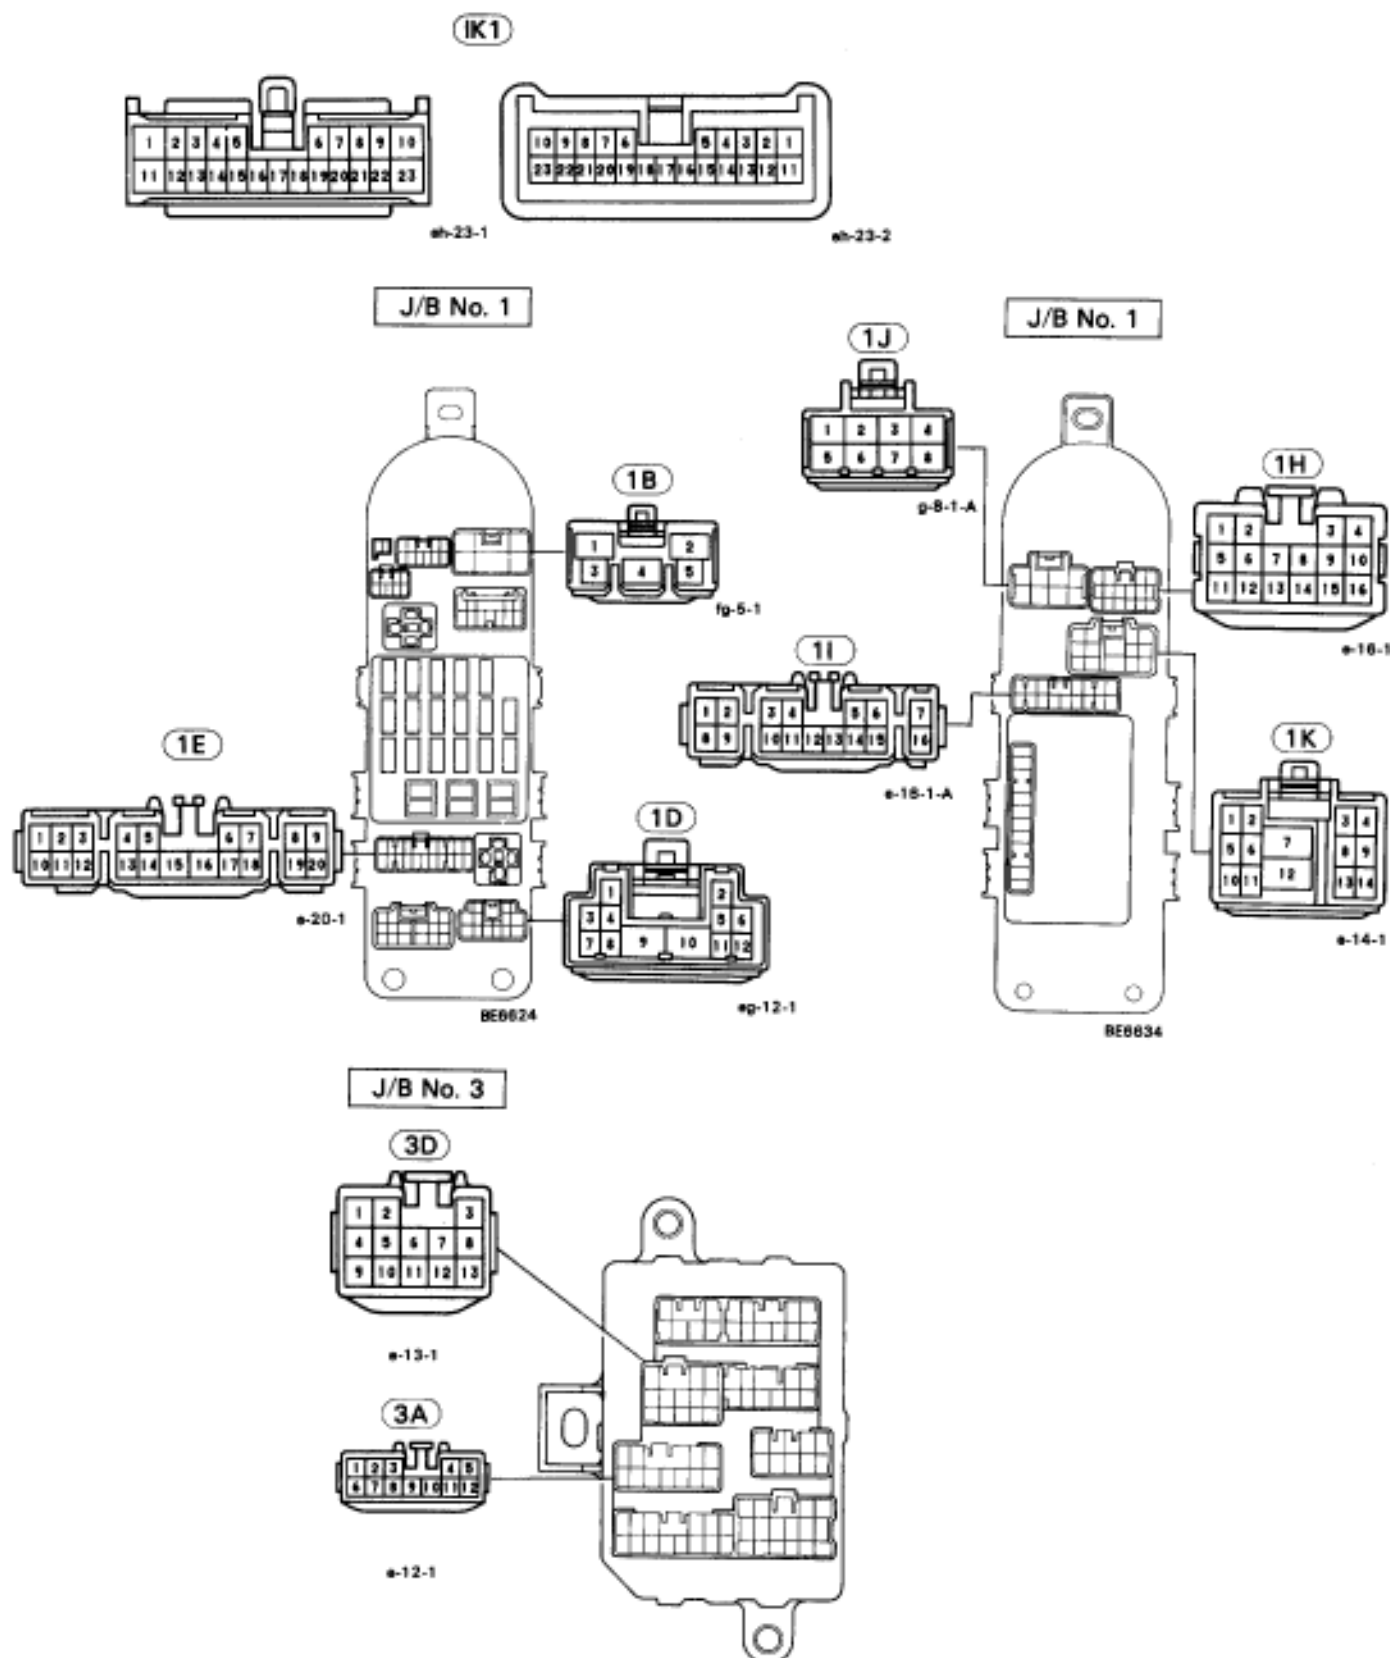

LOCATION OF CONNECTORS IN SEAT

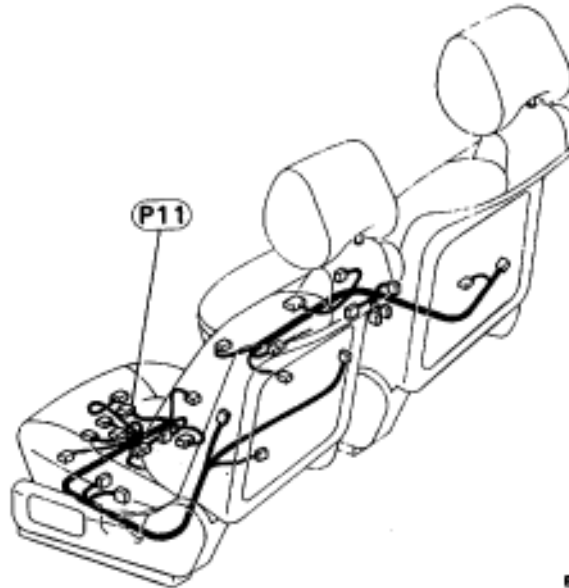

BE0033

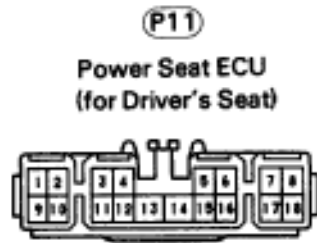

a-10-1