


Terminal of ECU

TILT & TELESCOPIC ECU

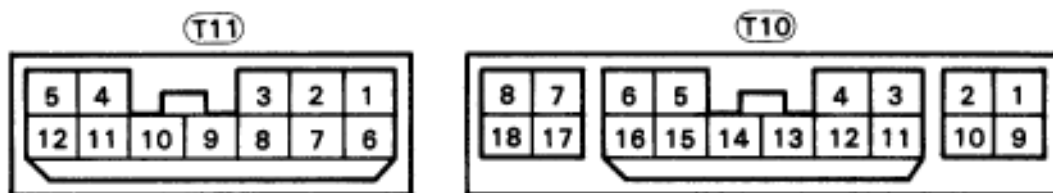

SR4791

Terminal No.	Symbol	Terminal Name	Terminal No.	Symbol	Terminal Name
T10- 1	Si	Serial In	T10-16	MSW	Manual Switch
2	DSW	Door Courtesy Switch	17	Vc	Sensor Power Source
3	M1	Return Switch 1	18	ECU-B	Power Source
4	ASW	Auto Switch	T11-1	IG	Ignition Switch
5	E ₁	Sensor Ground	2	TeM+	Telescopic Forward
6	TeS	Telescopic Sensor	3	TiM-	Tilt Down
7	TiS	Tilt Sensor	4	+B	Power Source
8	ECU-E	Ground	6	P	Neutral Switch
9	So	Serial Out	7	GND	Ground
10	UWSW	Unlock Warning Switch	10	TiM+	Tilt Up
11	MRY	Memory Switch	11	TiM-	Telescopic Back
12	M2	Return Switch 2			