


LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

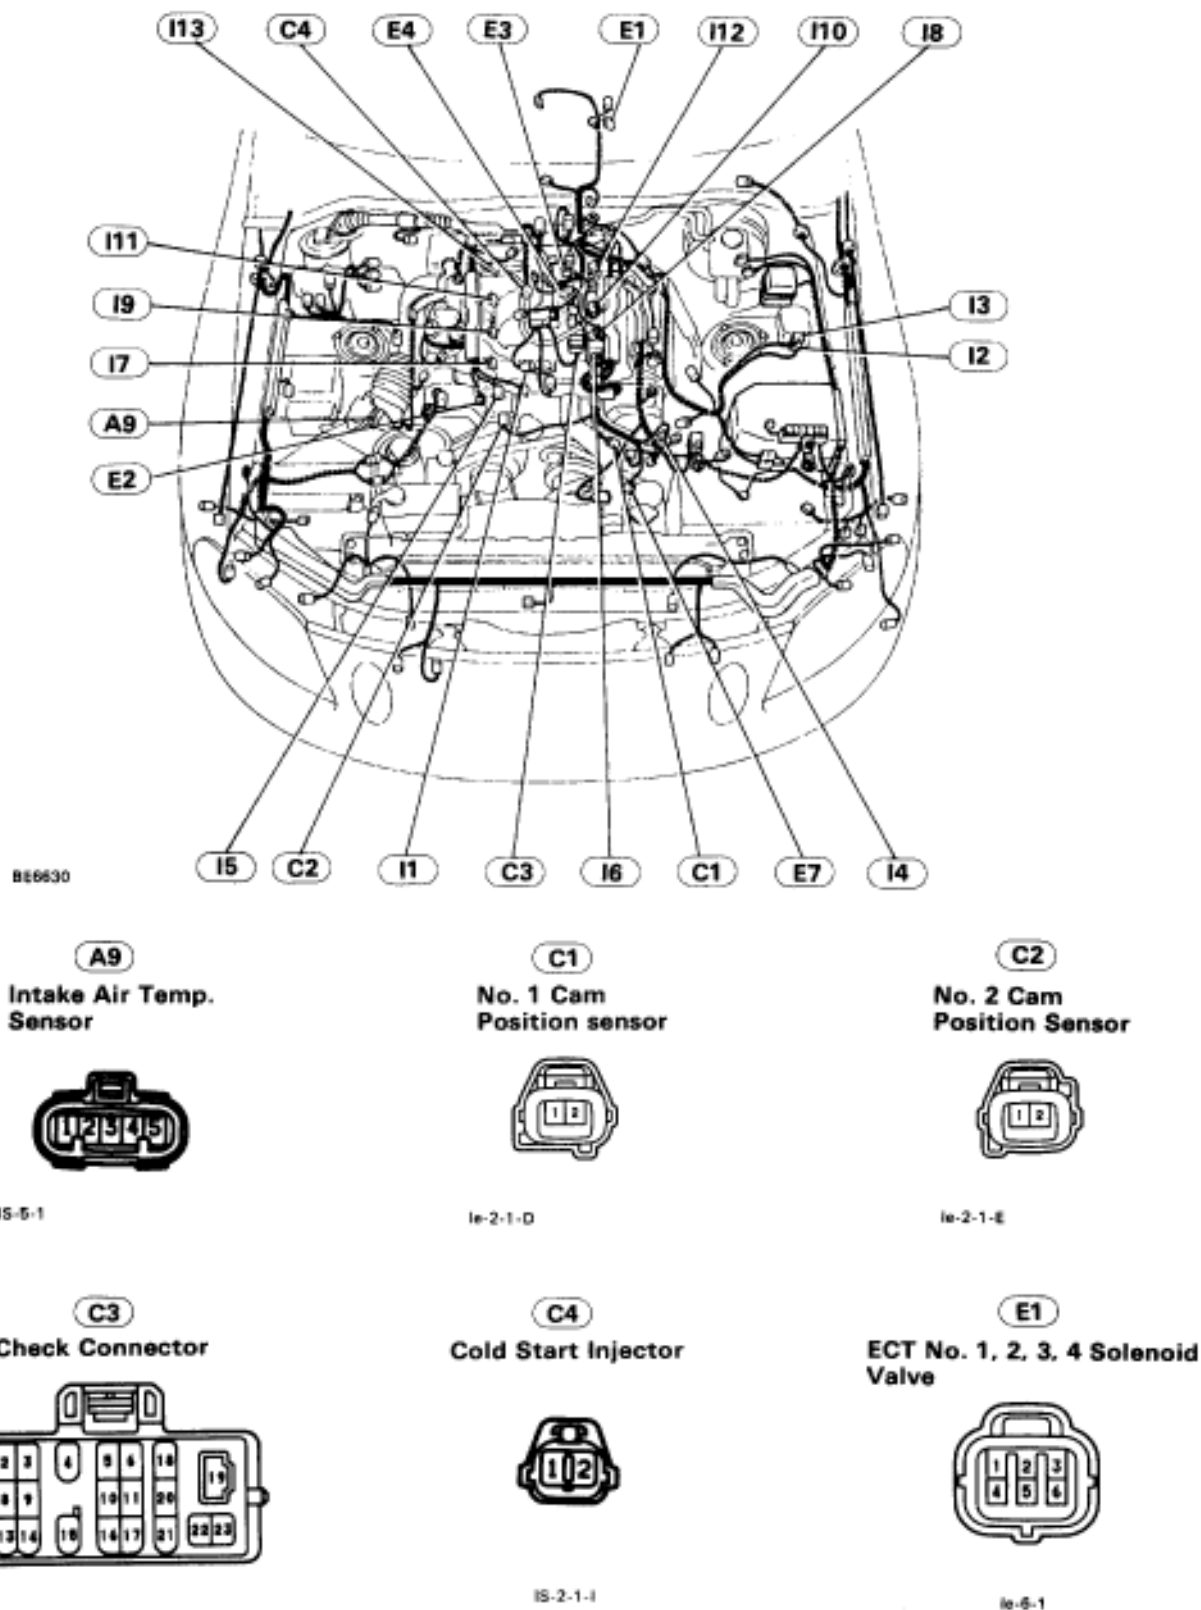

E2**Water Temp. Sensor**

V-2-1-C

E3**EGR Gas Temp. Sensor**

Ie-2-1-C

E4**EGR Valve**

Ie-6-1-D

E7**Engine Speed Sensor**

Ie-2-1-b

I1**ISC Valve**

Ie-6-1-D

I2**No. 1 Igniter**

Ie-5-1-B

I3**No. 2 Igniter**

Ie-5-1-B

I4**No. 1 Ignition Coil**

IS-2-1-L

I5**No. 2 Ignition Coil**


IS-2-1-L

I6	I7	I8	I9
I10	I11	I12	I13

Injector

Ie-2-1-a

Location of Connectors in Engine Compartment (Cont'd)

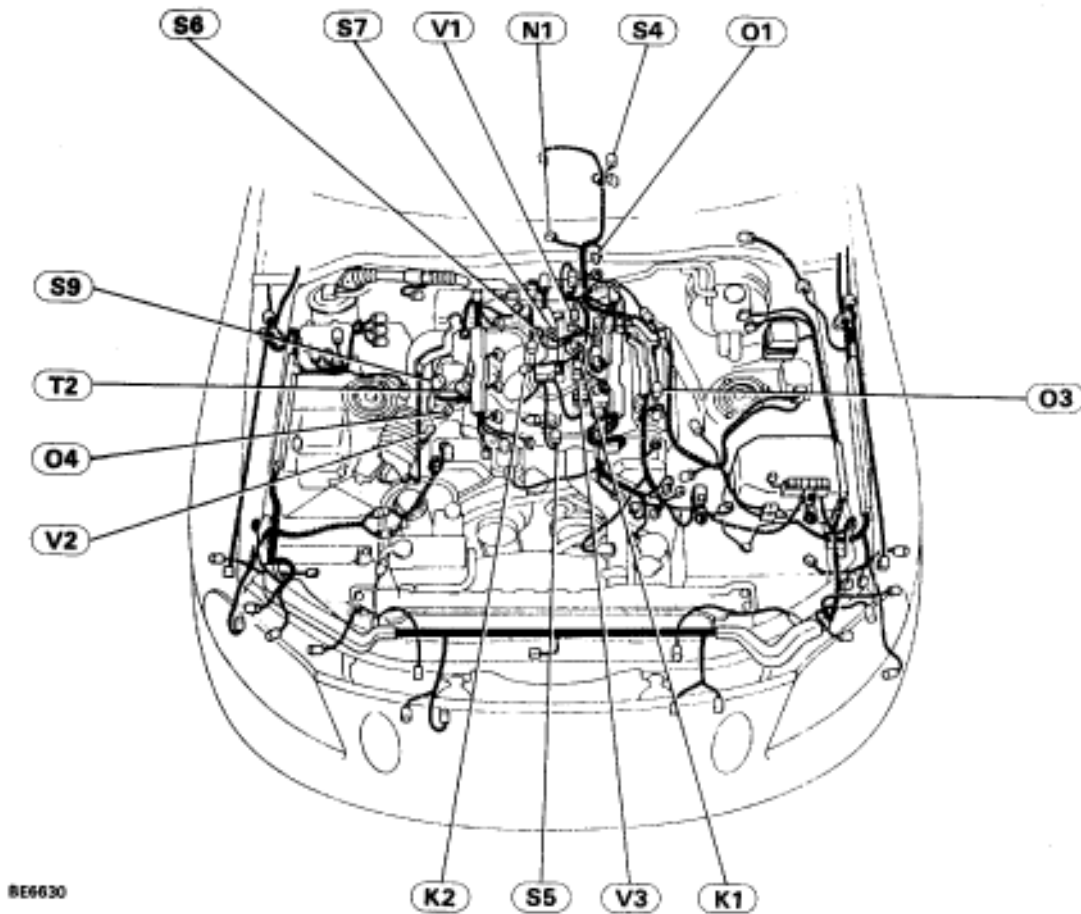

K1 K2

No. 1, 2 Knock Sensor



1a-1-1-B

N1

Neutral Start Switch



SH-9-1-A

O1

O/D Direct Clutch
Speed Sensor



1a-2-1-X

O3

Main Oxygen Sensor



1a-4-1-B

O4

Main Oxygen Sensor



1a-4-1-B

S4

No. 2 Speed Sensor



1a-2-1-X

S5**Start Injector Time
Switch**

V-2-1-A

S6**Starter Motor**

 
H-1-1

S9**Sub-Throttle Position
Sensor**

IV-4-1

T2**Throttle Position Sensor**

IS-4-1-C

S7**Starter Motor**

A-A


V1 V2**EGR VSV
EVAP VSV**

Is-2-1-X


V3**Fuel Pressure
Control VSV**

Is-2-1-W


Location of Connectors in Engine Compartment (Cont'd)

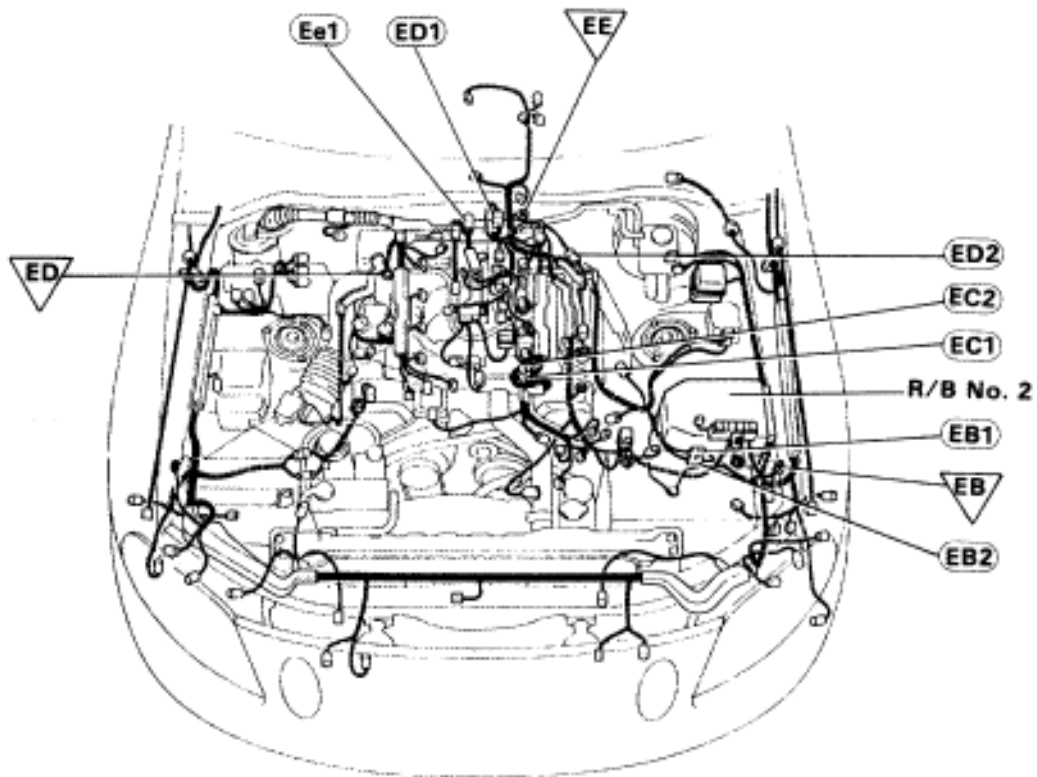


BE6630

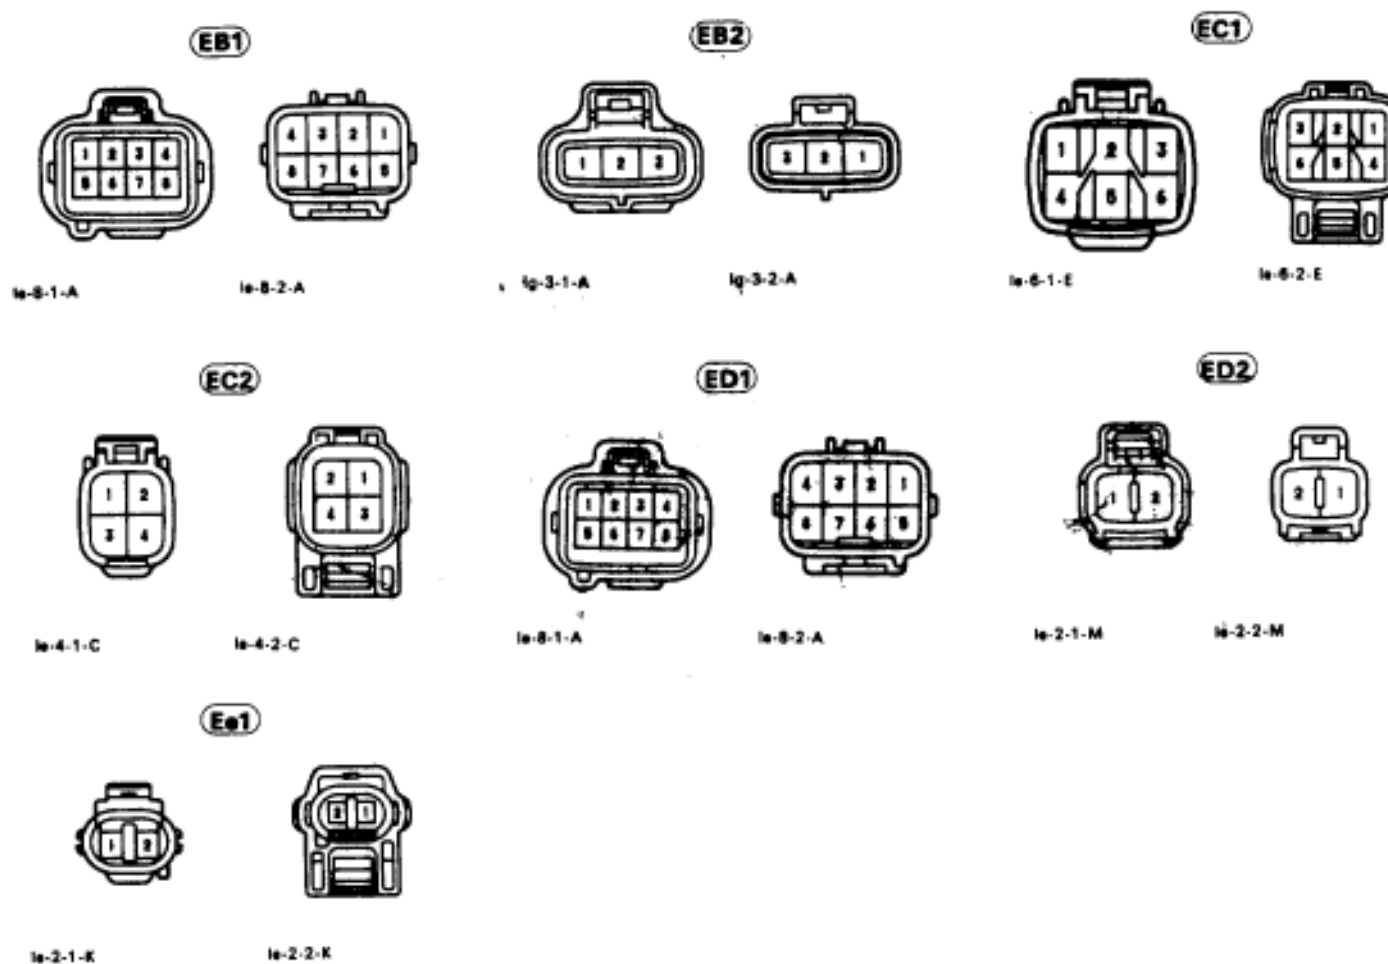

R/B No. 2

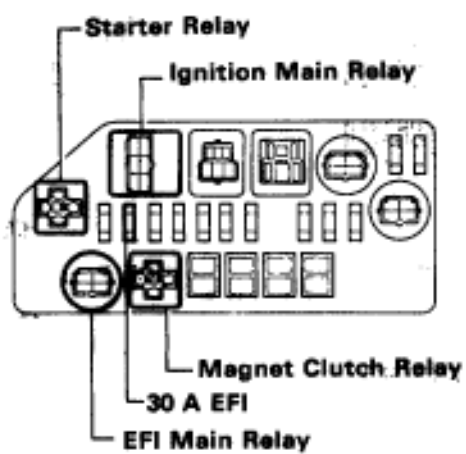

Location of Connectors in Instrument Panel

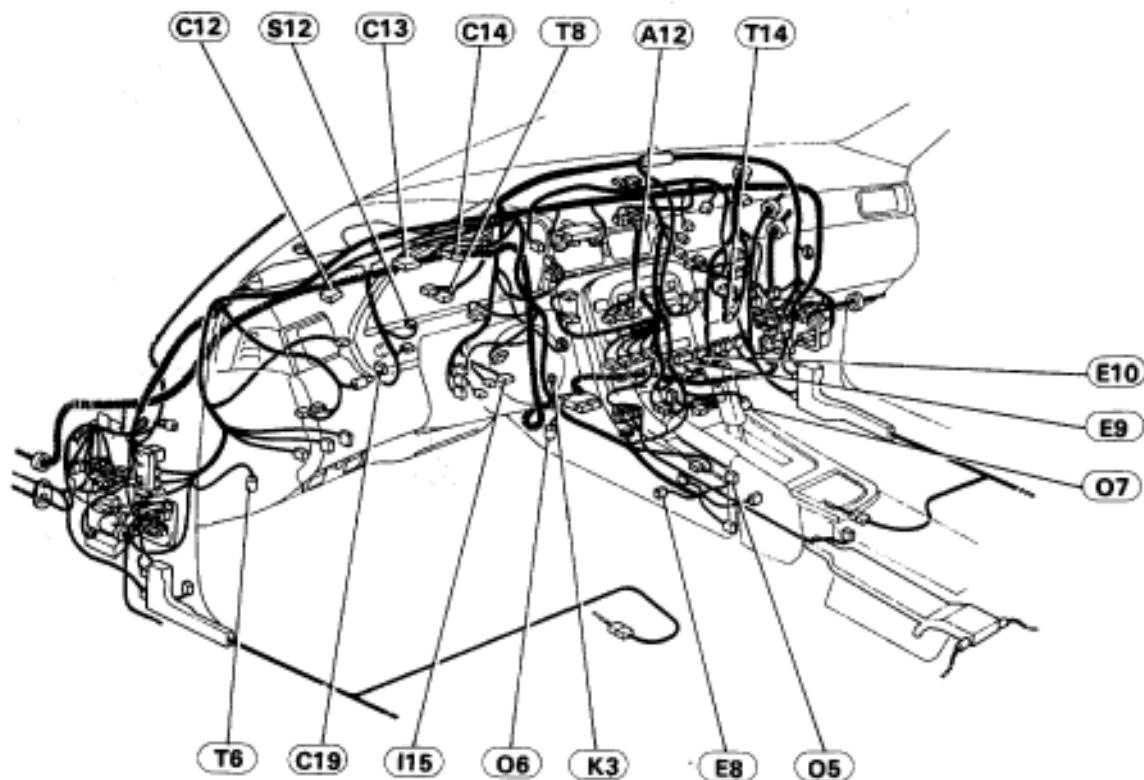

BE6631

A12**A/C Control Assembly**


h-11-1

C12**Combination Meter
"CHECK" Engine Warning Light**


eh-23-1

C13**"CHECK" Engine Warning Light**

e-18-1

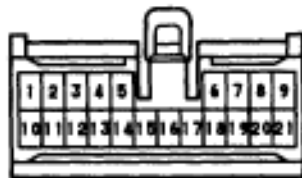C14**ECT Indicator Light**

h-21-1

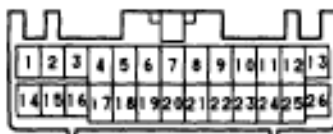
C19**Cruise Control ECU**

V6-2b-1-B

E8**ECT Pattern Select Switch**


e-4-1

E9
EFI ECU

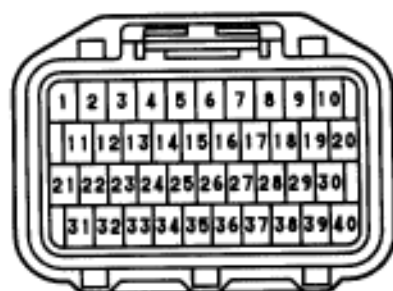


Id-40-1

E10
EFI ECU

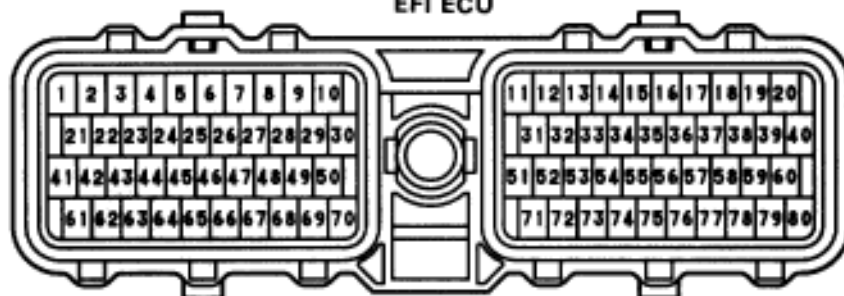

Id-80-1

I15
IG Switch

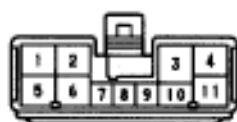

eg-11-1

K3
Kickdown Switch



Is-2-1-X

O5
O/D Main Switch




e-2-1

O6 O7
Sub-Oxygen Sensor



Is-4-1-D

S12
Stop Light Switch

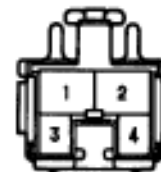

eg-4-1

T6
TDCL




S-17-1

T8
Theft Deterrent ECU




e-20-1




T14
TRAC ECU

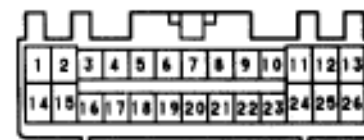


Vd-26-1

Location of Connectors in Instrument Panel (Cont'd)

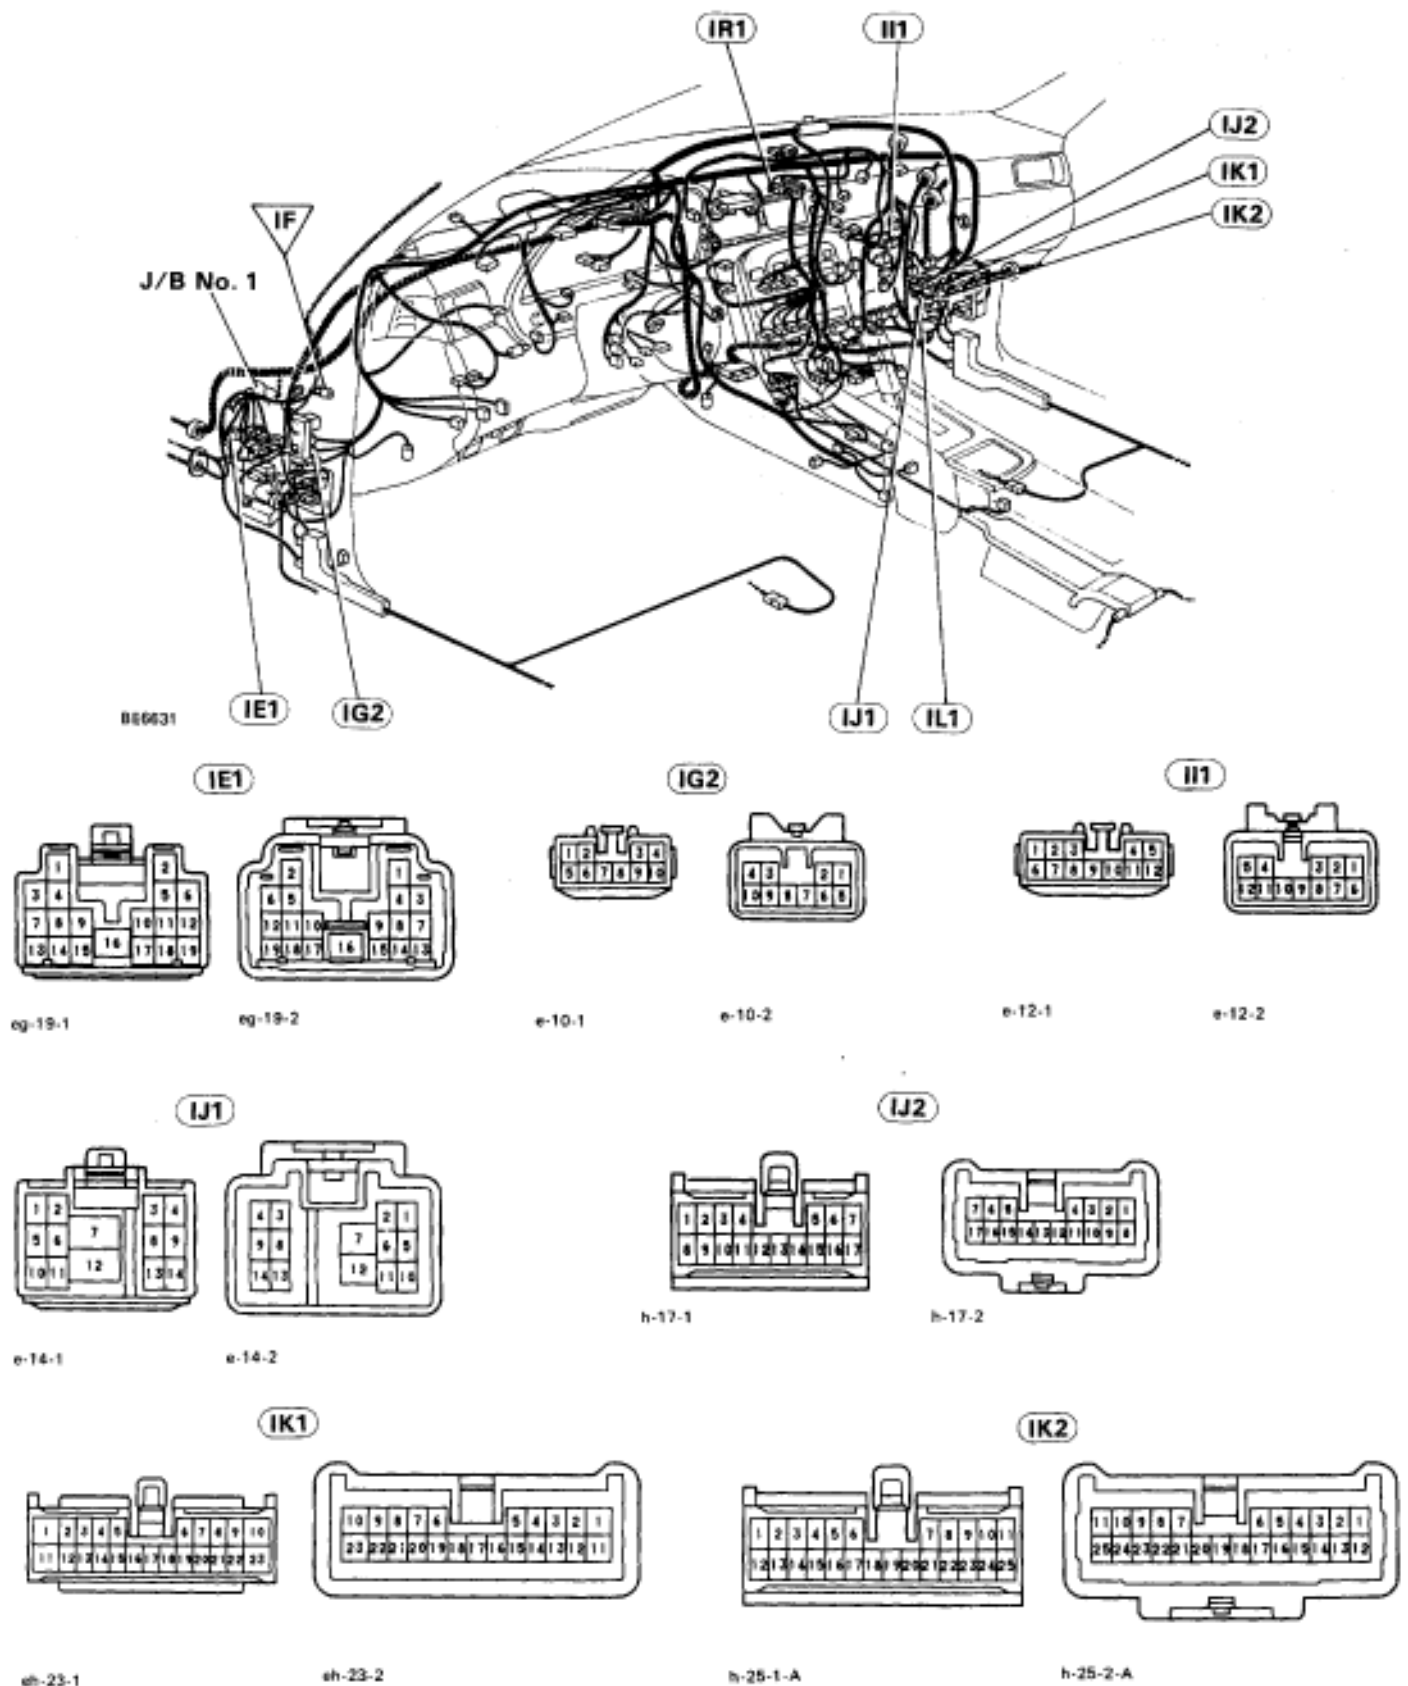

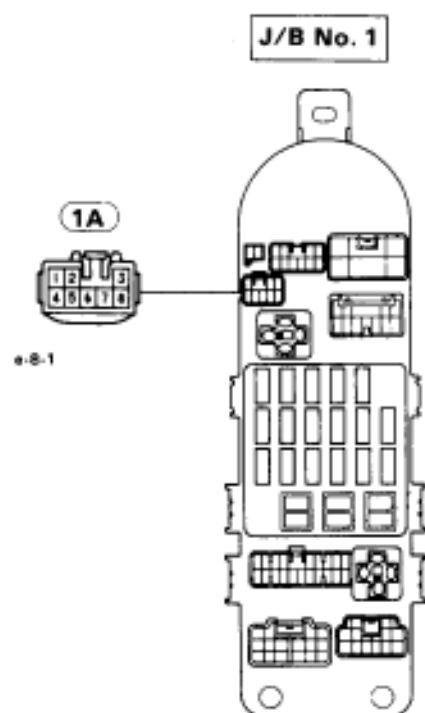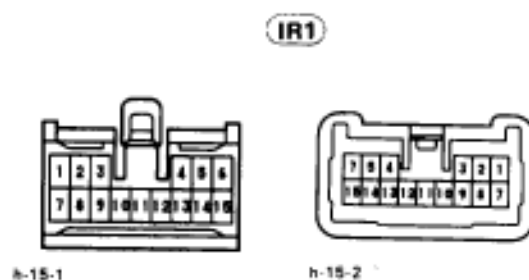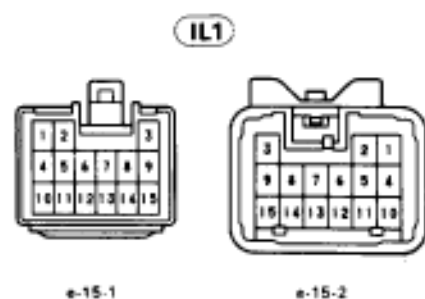


BE6624

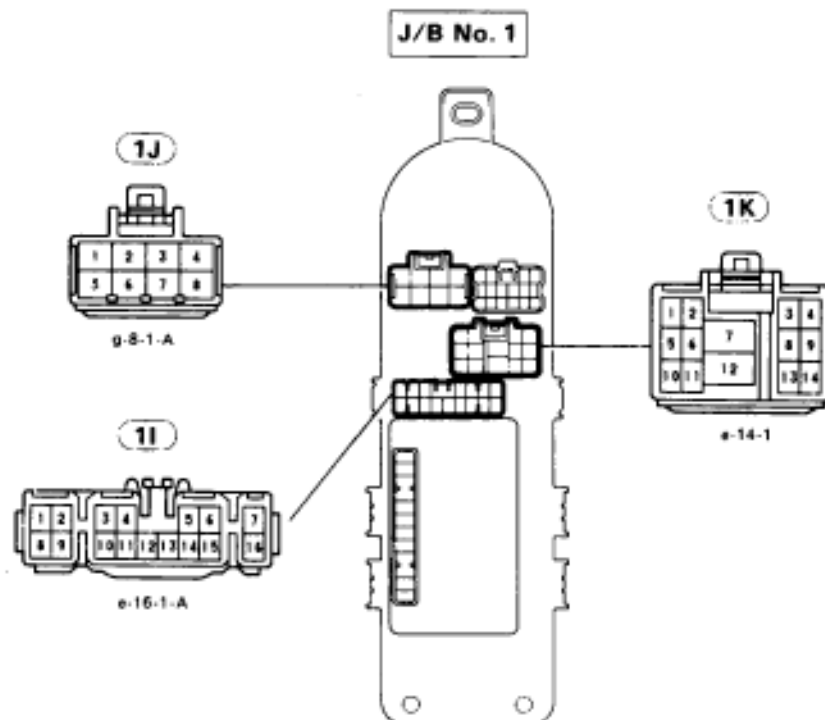

BE6624

Location of Connectors in Body

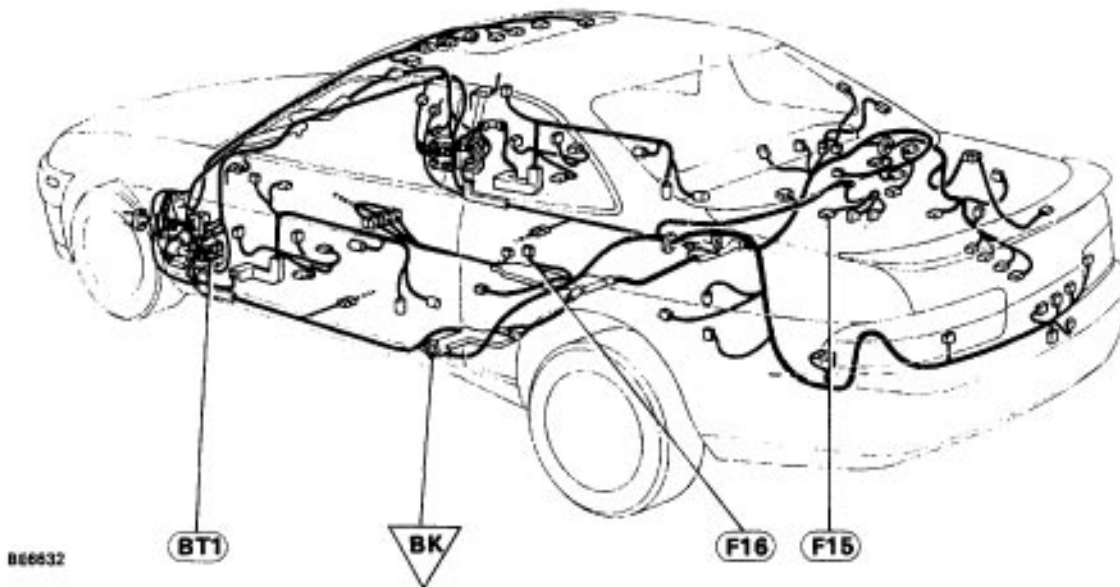

F15
Fuel Pump




g-2-1

F16
Fuel Pump ECU




e-5-1

BT1

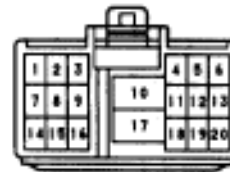

e-20-1-B

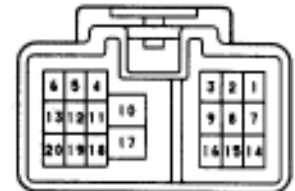

e-20-2-B

–MEMO –