

BLOWER MOTOR REMOVAL



AC2NB-01

1. REMOVE THESE PARTS:

- (a) No.2 under cover
(See page [BO-95](#))
- (b) Glove compartment assembly
(See page [BO-95](#))


2. REMOVE ECU COVER

- (a) Lift up the front end of the carpet on the passenger side.
- (b) Remove the 2 nuts and the cover.

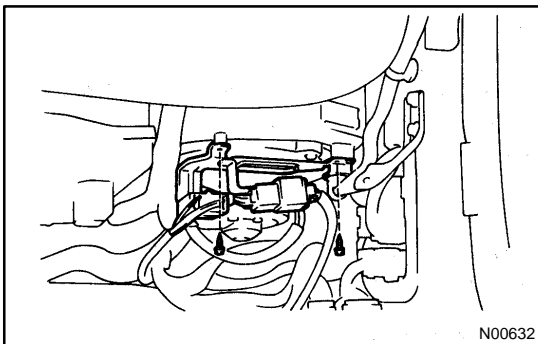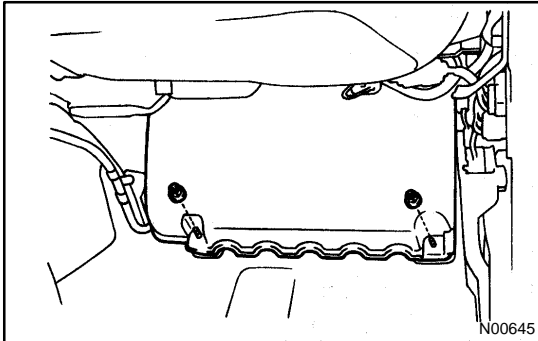

3. REMOVE CONNECTOR BRACKET

Remove the 2 screws and the bracket.

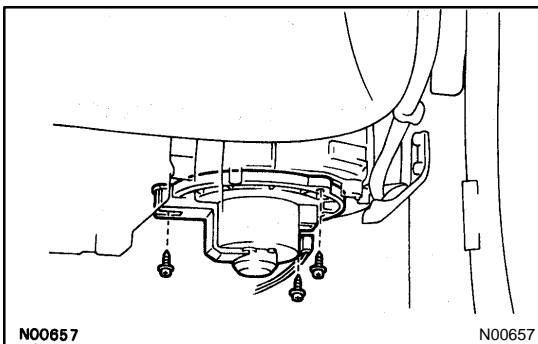

4. REMOVE MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and the motor.