


BLOWER MOTOR CONTROL RELAY REMOVAL

AC14H-01

1. REMOVE BLOWER MOTOR
(See page [AC-55](#))

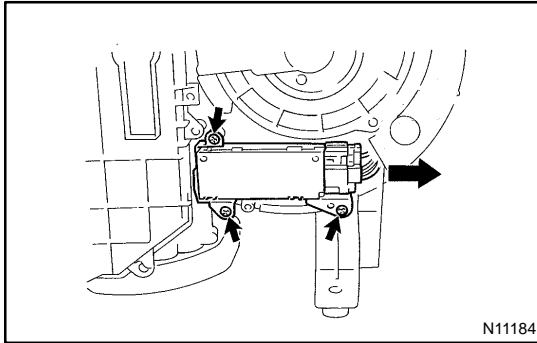

2. REMOVE BLOWER MOTOR CONTROL RELAY
 - (a) Disconnect the connector.
 - (b) Remove the 3 screws and the blower motor control relay.