


## REMOVAL

### 1. REMOVE EVAPORATOR

(See page [AC-42](#))

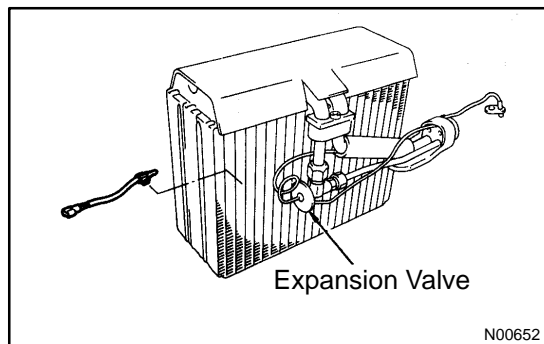

### 2. REMOVE EXPANSION VALVE

- (a) Remove the packing.
- (b) Remove the clamp and heat sensing tube from the suction tube.
- (c) Loosen the 2 nuts and remove the expansion valve from the tubes.

#### Torque:

**19 mm nut: 14 N·m (140 kgf·cm, 10 ft·lbf)**

**24 mm nut: 22 N·m (225 kgf·cm, 16 ft·lbf)**

#### HINT:

At the time of installation, please refer to the following item.  
Lubricate 2 new O-rings with compressor oil and install them to the tubes.