



HEATER RADIATOR REMOVAL

1. REMOVE A/C UNIT
(See page [AC-24](#))

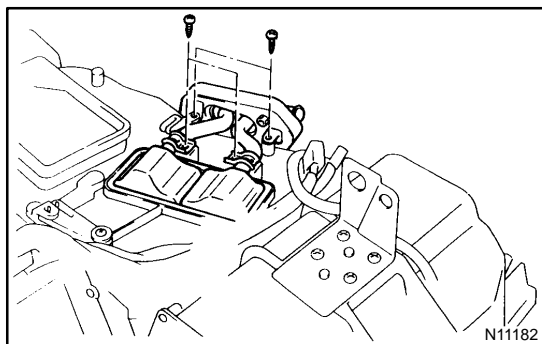

2. REMOVE HEATER RADIATOR

- (a) Remove the 2 screws and the plate.
- (b) Remove the 2 screws and the clamps.

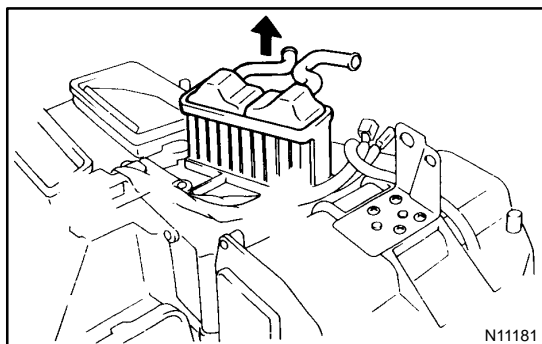

- (c) Pull out the radiator.