

PRESSURE SWITCH REMOVAL

AC14R-02

1. DISCHARGE REFRIGERANT FROM REFRIGERANT SYSTEM


HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 950 ± 50 g (33.51 ± 1.76 oz.)

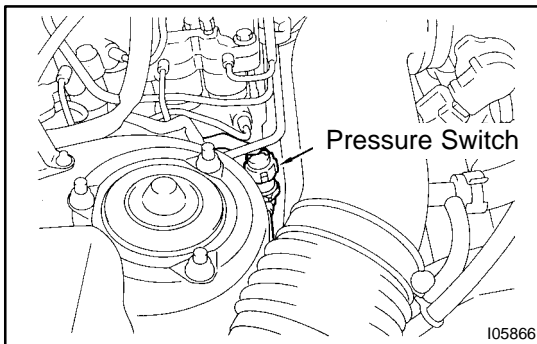

2. REMOVE PRESSURE SWITCH

- (a) Disconnect the connector.
- (b) Remove the pressure switch from the liquid tube.

Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)

HINT:

- Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.
- At the time of installation, please refer to the following item.

Lubricate a new O-ring with compressor oil and install them to the switch.