

## REMOVAL


1. REMOVE HEADLIGHT LH
2. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

### HINT:

At the time of installation, please refer the the following item.  
Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

**Specified amount: 950 ± 50 g (33.51 ± 1.76 oz.)**

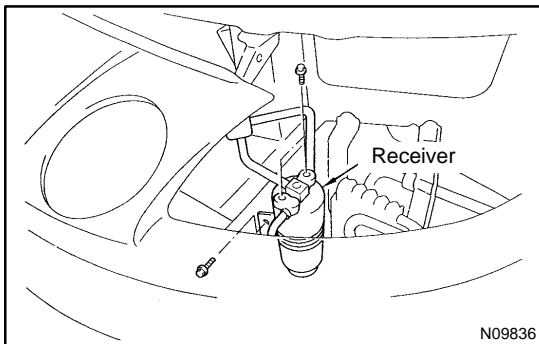

3. DISCONNECT 2 LIQUID TUBES FROM RECEIVER

Remove the 2 bolts and both the tubes from the receiver.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

### NOTICE:

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

### HINT:

At the time of installation, please refer to the following item.  
Lubricate 2 new O-rings with compressor oil and install them to the tubes.

4. REMOVE RECEIVER FROM RECEIVER HOLDER

Remove the bolt, then remove the receiver from the receiver holder.

### HINT:

At the time of installation, please refer to the following item.  
If receiver was replaced, add compressor oil to compressor.

**Add 10 cc (0.35 fl.oz.)**

**Compressor oil: ND-OIL 8 or equivalent**