


SENSOR REMOVAL

AC2NC-01

1. REMOVE ROOM TEMPERATURE SENSOR


- (a) Remove the No.1 lower finish panel.
(See page [BO-95](#))

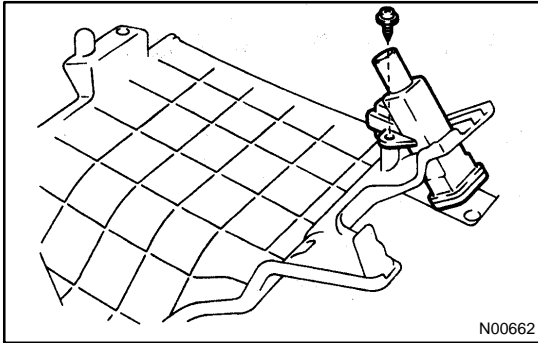

- (b) Remove the sensor.
Remove the screw and sensor.

2. REMOVE AMBIENT TEMPERATURE SENSOR

- (a) Remove the engine under cover.

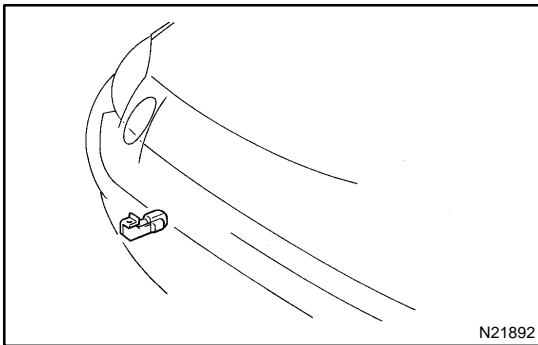


- (b) Remove the sensor.
Pry out the sensor, then disconnect the connector.

3. REMOVE SOLAR SENSOR


- (a) Remove the instrument panel.
(See page [BO-95](#))
- (b) Remove the sensor.

4. REMOVE EVAPORATOR TEMPERATURE SENSOR

- (a) Remove the evaporator.
(See page [AC-42](#))

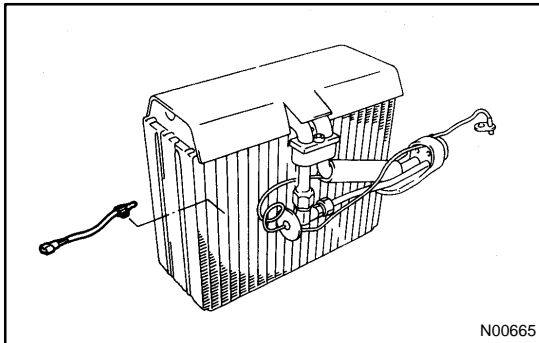

- (b) Pull out the sensor from evaporator.

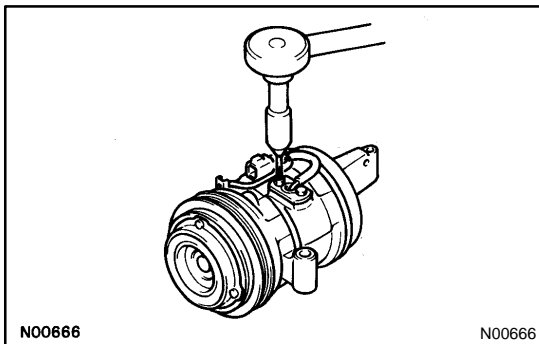**5. REMOVE REVOLUTION DETECTING SENSOR**


- (a) Remove the compressor.
(See page [AC-30](#))
- (b) Remove the sensor.
Remove the 2 bolts and sensor.
Torque: 6.0 N·m (60 kgf·cm, 52 in.-lbf)

HINT:

At the time of installation, please refer to the following item.
Lubricate a new O-ring with compressor oil and install the sensor.

6. REMOVE ENGINE COOLANT TEMPERATURE (ECT) SENSOR

- (a) Remove the A/C unit.
(See page [AC-24](#))

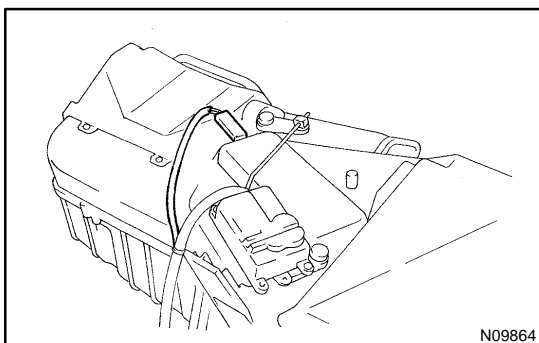

- (b) Remove the sensor.
After taking off the clamp, take out the sensor.