

## INSPECTION

1. INSPECT AIR INLET SERVOMOTOR  
(See page DI-855)
2. INSPECT AIR MIX SERVOMOTOR  
(See page DI-852)
3. INSPECT AIR OUTLET SERVOMOTOR  
(See page DI-858)