


SERVOMOTOR REMOVAL

AC14K-02

1. REMOVE AIR INLET SERVOMOTOR


- (a) Remove these parts:
- (1) No.2 under cover
(See page [BO-95](#))
 - (2) Glove compartment assembly
(See page [BO-95](#))
 - (3) Lower finish panel RH
(See page [BO-95](#))

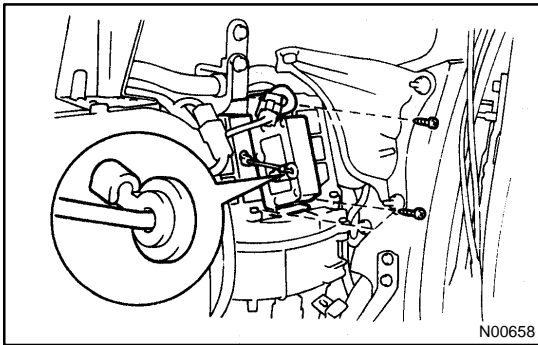

- (b) Remove the servomotor.
- (1) Disconnect the connector.
 - (2) Disconnect the control link.
 - (3) Remove the 3 screws and the servomotor.

2. REMOVE AIR MIX SERVOMOTOR


- (a) Remove the A/C unit.
(See page [AC-24](#))

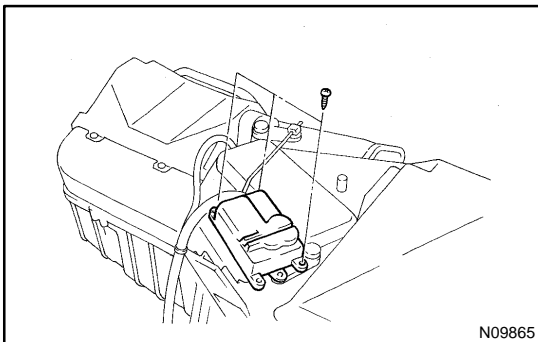

- (b) Remove the servomotor.
- (1) Disconnect the connector.
 - (2) Remove the 3 screws and the servomotor.

3. REMOVE AIR OUTLET SERVOMOTOR**(a) Remove these parts:**

- (1) No.1 under cover
(See page [BO-95](#))
- (2) No.1 lower finish panel
(See page [BO-95](#))
- (3) Lower finish panel LH
(See page [BO-95](#))

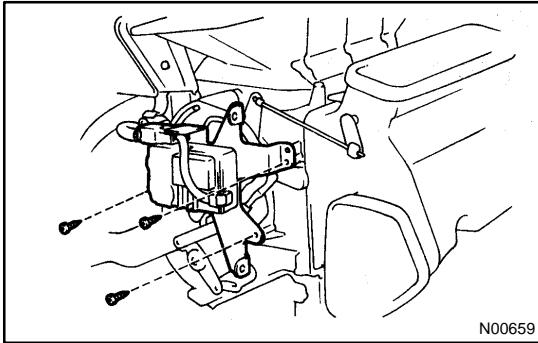**(b) Remove the servomotor.**

- (1) Disconnect the connector.
- (2) Remove the 3 screws and the servomotor.