



INSTALLATION

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installation surface of the transmission housing to the installation surface of the torque converter clutch.

Correct distance: 17.1 mm (0.673 in.) or more

2. TRANSMISSION INSTALLATION

Installation is in the reverse order of removal (See page [AT-21](#)).

HINT:

After installation, check, inspect and adjust the following items.

- Shift lever position and park/neutral position switch (See page [DI-350](#)).
- Fluid level (See page [DI-350](#)).
- Conduct the road test of the vehicle.