


INSTALLATION

1. INSTALL MOTOR ANTENNA

- (a) Install the antenna nut.
- (b) Connect the motor antenna connector and the antenna cord.
- (c) Install the nut.

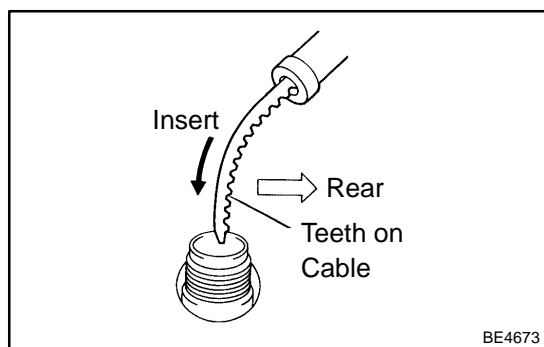

2. INSTALL ANTENNA ROD


- (a) Insert the cable of the rod until it reaches the bottom.

HINT:

- When inserting the cable, the teeth on the cable must face toward the rear of the vehicle.
- Insert the cable approx. 400 mm (15.75 in.)
- (b) Wind the cable to retract the rod by running the ignition switch to "LOCK" position.

HINT:

- If the ignition switch is already in "LOCK" position, perform step 1.
- In case the cable is not wound, twist it, as shown in the illustration.
- Even if the rod has not retracted fully, install the antenna nut and inspect the antenna rod operation. It will finally retract fully.
- (c) Inspect the antenna rod operation by pushing the radio wave band select buttons.

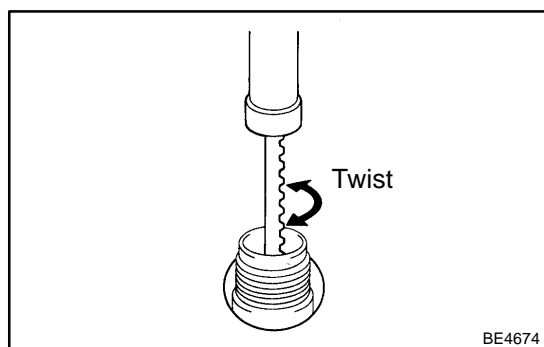

3. INSTALL ANTENNA CORD

To install, follow the removal procedure in reverse.