

PROBLEM SYMPTOMS TABLE

USA:

HEADLIGHT SYSTEM

Symptom	Suspect Area	See page
Headlight does not light. (Taillight is normal)	1. Headlight Control Relay (R/B No.2) 2. Headlight Dimmer Switch 3. Headlight Dimmer Relay (R/B No.2) 4. Light Control Switch 5. Automatic Light Control Sensor 6. Wire Harness 7. Headlight Bulb	BE-27 BE-27 BE-27 BE-27 BE-27
Headlight does not light. (Taillight does not light)	1. Light Control Switch 2. Integration Relay (J/B No.1) 3. Automatic Light Control Sensor 4. Wire Harness	BE-27 BE-27 BE-27
Only one side light does not light.	1. Headlight Bulb 2. Wire Harness	
"LO-Beam" does not light (All).	1. Headlight Dimmer Relay (R/B No.2) 2. Headlight Dimmer Switch 3. Wire Harness	BE-27 BE-27
"LO-Beam" does not light (One side).	1. HEAD LH-LWR Fuse (R/B No.2) 2. HEAD RH-LWR Fuse (R/B No.2) 3. Headlight Bulb 4. Wire Harness	BE-16 BE-16
"HI-Beam" does not light (All).	1. Headlight Dimmer Relay (R/B No.2) 2. Headlight Dimmer Switch 3. Wire Harness	BE-27 BE-27
"HI-Beam" does not light (One side).	1. HEAD LH-UPR Fuse (R/B No.2) 2. HEAD RH-UPR Fuse (R/B No.2) 3. Headlight Bulb 4. Wire Harness	BE-16 BE-16
"Flash" does not light.	1. Headlight Dimmer Switch 2. Wire Harness	BE-27
"Auto Turn-off System" does not operate.	1. Integration Relay (J/B No.1) 2. GAUGE Fuse (J/B No.1) 3. ECU-B Fuse (J/B No.1) 4. Wire Harness 5. Door Courtesy Switch (Driver's)	BE-27 BE-16 BE-16 BE-47
"Automatic Light Control System" does not operate.	1. Automatic Light Control Sensor 2. DOME Fuse (R/B No.2) 3. ECU-IG Fuse (J/B No.1) 4. Wire Harness	BE-27 BE-16 BE-16
Headlight does not light with light control SW at HEAD.	1. Integration Relay (J/B No.1) 2. Light Control Switch 3. Wire Harness	BE-27 BE-27
Headlight does not go out with light control SW at OFF.	1. Headlight Control Relay (R/B No.2) 2. Wire Harness	BE-27
Taillight does not light with light control SW at TAIL.	1. Other Parts *1 2. Light Control Switch 3. Wire Harness	BE-27
Taillight does not light with light control SW at OFF.	1. Other Parts *1 2. Light Control Switch 3. Wire Harness	BE-27

*1 Taillight Control Relay

CANADA:**HEADLIGHT SYSTEM**

Symptom	Suspect Area	See page
Headlight does not light. (Taillight is normal)	1. Headlight Control Relay (R/B No.2) 2. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 3. Daytime Running Light No.2, No.3, No.4 Relay 4. Headlight Dimmer Switch 5. Light Control Switch 6. Automatic Light Control Sensor 7. Wire Harness 8. Headlight Bulb	BE-27 BE-27 BE-27 BE-27 BE-27 BE-27
Headlight does not light. (Taillight does not light)	1. Light Control Switch 2. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 3. Automatic Light Control Sensor 4. Wire Harness	BE-27 BE-27 BE-27
Only one side light does not light.	1. Headlight Bulb 2. Wire Harness	
"LO-Beam" does not light (All).	1. Headlight Dimmer Switch 2. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 3. Daytime Running Light No.2, No.3, No.4 Relay 4. Wire Harness	BE-27 BE-27 BE-27
"LO-Beam" does not light (One side).	1. HEAD LH-LWR Fuse (R/B No.2) 2. HEAD RH-LWR Fuse (R/B No.2) 3. Headlight Bulb 4. Wire Harness	BE-16 BE-16
"HI-Beam" does not light (All).	1. Headlight Dimmer Switch 2. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 3. Daytime Running Light No.2, No.3, No.4 Relay 4. Wire Harness	BE-27 BE-27 BE-27
"Flash" does not light.	1. Headlight Dimmer Switch 2. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 3. Daytime Running Light No.2, No.3, No.4 Relay 4. Wire Harness	BE-27 BE-27 BE-27
"Auto Turn-off System" does not operate.	1. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 2. GAUGE Fuse (J/B No.1) 3. ECU-B Fuse (J/B No.1) 4. Wire Harness 5. Door Courtesy Switch (Driver's)	BE-27 BE-16 BE-16 BE-47
"Automatic Light Controlling System" does not operate.	1. Automatic Light Control Sensor 2. DOME Fuse (R/B No.2) 3. ECU-IG Fuse (J/B No.1) 4. Wire Harness	BE-27 BE-16 BE-16
Headlight does not light with light control SW at HEAD.	1. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 2. Light Control Switch 3. Wire Harness	BE-27 BE-16

Headlight does not go out with light control SW at OFF.	1. Headlight Control Relay (R/B No.2) 2. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 3. Daytime Running Light No.2, No.3, No.4 Relay 4. Wire Harness	BE-27 BE-27 BE-27
Taillight does not light with light control SW at TAIL.	1. Other Parts *1 2. Light Control Switch 3. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 4. Daytime Running Light No.2, No.3, No.4 Relay	BE-27 BE-27 BE-27
Taillight does not go out with light control SW at OFF.	1. Other Parts *1 2. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 3. Daytime Running Light No.2, No.3, No.4 Relay 4. Light Control Switch 5. Wire Harness	BE-27 BE-27 BE-27
Headlight and taillight do not light with engine running and light control SW at OFF.	1. GAUGE Fuse (J/B No.1) 2. ECU-B Fuse (J/B No.1) 3. Integration Relay (J/B No.1) (Daytime Running Light No.1 Relay) 4. Daytime Running Light No.2, No.3, No.4 Relay 5. Wire Harness 6. Other Parts *2 7. Parking Brake Switch	BE-16 BE-16 BE-27 BE-27 BE-86

*1 Taillight Control Relay

*2 Generator L Terminal

USA:**FOG LIGHT SYSTEM**

Symptom	Suspect Area	See page
Fog light does not light with light control SW HEAD (Headlight is normal).	1. FOG Fuse (R/B No.4) 2. Fog Light Relay (R/B No.5) 3. Fog Light Switch 4. Wire Harness	BE-16 BE-38 BE-38
Fog light does not light with light control SW HEAD (Headlight does not light).	1. *1 Other Parts 2. Wire Harness	
Only one light does not light.	1. Bulb 2. Wire Harness	

*1: Inspect Headlight System

CANADA:**FOG LIGHT SYSTEM**

Symptom	Suspect Area	See page
Fog light does not light with light control SW HEAD (Headlight is normal).	1. FOG Fuse (R/B No.4) 2. Fog Light Relay (R/B No.5) 3. Fog Light Switch 4. Wire Harness 5. Daytime Running Light Relay	BE-16 BE-38 BE-38 BE-27
Fog light does not light with light control SW HEAD (Headlight does not light).	1. Daytime Running Light Relay 2. Wire Harness	BE-27
Only one light does not light.	1. Bulb 2. Wire Harness	

TAILLIGHT SYSTEM

Symptom	Suspect Area	See page
Taillight does not light. (Headlight does not light)	1. Light Control Switch 2. Integration Relay (J/B No.1) 3. Wire Harness	BE-27 BE-27
Taillight does not light. (Headlight is normal)	1. TAIL Fuse (J/B No.1) 2. Taillight Control Relay (J/B No.1) 3. Integration Relay (J/B No.1) 4. Light Control Switch 5. Wire Harness	BE-16 BE-38 BE-38
Only one side light does not light (Taillight).	1. Bulb 2. Wire Harness	
Rear Combination light does not light.	1. Wire Harness 2. Light Failure Sensor 3. Bulb	BE-52
"Light Auto Turn-Off System" does not operate.	1. Integration Relay (J/B No.1) 2. GAUGE Fuse (J/B No.1) 3. Wire Harness 4. Door Courtesy Switch	BE-27 BE-16 BE-47
Taillight does not light with light control SW in TAIL. (CANADA Models Only)	1. Taillight Control Relay (J/B No.1) 2. Light Control Switch 3. Integration Relay (J/B No.1)	BE-38 BE-38 BE-38
Taillight does not go out with light control SW in OFF. (CANADA Models Only)	1. Taillight Control Relay (J/B No.1) 2. Integration Relay (J/B No.1) 3. Light Control Switch 4. Wire Harness	BE-38 BE-38 BE-38

TURN SIGNAL AND HAZARD WARNING SYSTEM

Symptom	Suspect Area	See page
"Hazard" and "Turn" do not light up.	1. Hazard Warning Switch 2. Turn Signal Flasher (R/B No.4) 3. Wire Harness	BE-40 BE-40
The flashing frequency is abnormal.	1. Bulb 2. Turn Signal Switch 3. Wire Harness	BE-40
Hazard warning light does not light up. (Turn is normal)	1. HAZ-HORN Fuse (R/B No.2) 2. Wire Harness	BE-16
Hazard warning light does not light up in one direction.	1. Hazard Warning Switch 2. Wire Harness	BE-40
*1 Turn signal does not light up.	1. Ignition Switch 2. TURN Fuse (J/B No.1) 3. Turn Signal Switch 4. Wire Harness	BE-22 BE-16 BE-40
*2 Turn signal does not light up.	1. TURN Fuse (J/B No.1) 2. Turn Signal Switch 3. Wire Harness	BE-16 BE-40
Turn signal does not light up in one direction.	1. Turn Signal Switch 2. Wire Harness	BE-40
Only one bulb does not light up.	1. Bulb 2. Wire Harness	

*1: Combination Meter, Wiper and Washer do not operate.

*2: Combination Meter, Wiper and Washer are normal.

STOP LIGHT SYSTEM

Symptom	Suspect Area	See page
Stop light does not light up.	1. STOP Fuse (J/B No.1) 2. Stop Light Switch 3. Light Failure Sensor 4. Wire Harness	BE-16 BE-52 BE-52
Stop light always lights up.	1. Stop Light Switch 2. Wire Harness	BE-52
Only one light always lights up.	1. Wire Harness	
Only one light does not light.	1. Bulb 2. Wire Harness	

ILLUMINATION LIGHT SYSTEM

Symptom	Suspect Area	See page
Illumination lights do not light. (Taillight is normal)	1. PANEL Fuse (J/B No.1) 2. Integration Relay (CANADA) (J/B No.1) 3. Wire Harness	BE-16 BE-47
Illumination lights do not light. (Taillight does not light)	1. Taillight Control Relay (J/B No.1) 2. Inspect Taillight System 3. Wire Harness 4. PANEL Fuse (J/B No.1) 5. Integration Relay (CANADA) (J/B No.1)	BE-38 BE-2 BE-16 BE-47
Illumination lights with adjustable brightness do not light.	1. Rheostat Light Control Volume 2. Wire Harness	BE-44
Only one light does not light.	1. Bulb 2. Wire Harness	
Brightness does not change when rheostat volume is turned ALL. (See page BE-xx)	1. Rheostat Light Control Volume 2. Wire Harness	BE-44
Brightness does not change when rheostat volume is turned. (Only Combination Meter)	1. Combination Meter 2. Wire Harness	BE-59
Glove box does not light.	1. Glove Box Light Switch 2. Bulb 3. Wire Harness	BE-44

INTERIOR LIGHT SYSTEM

Symptom	Suspect Area	See page
Only one interior light does not light up.	1. Bulb 2. Wire Harness	
Interior light does not light up (All).	1. DOME Fuse (R/B No.2) 2. Wire Harness	BE-16
"Illuminated Entry System" does not operate.	1. Integration Relay (J/B No.1) 2. Door Courtesy Switch 3. Wire Harness	BE-47 BE-47
Interior light does not light up. (in front personal light)	1. Bulb 2. Front Personal Light 3. Wire Harness	BE-47
Front personal light does not light up.	1. Bulb 2. Front Personal Light 3. Wire Harness	BE-47
Rear personal light does not light up.	1. Bulb 2. Wire Harness	

BODY ELECTRICAL – BODY ELECTRICAL SYSTEM

Vanity light does not light up.	1. Bulb 2. Vanity Light 3. Wire Harness	BE-47
Luggage compartment light does not light up.	1. Bulb 2. Luggage Compartment Door Courtesy Switch 3. Wire Harness	BE-47
Courtesy light does not light up.	1. Bulb 2. Door Courtesy Switch 3. Wire Harness	BE-47

WIPER AND WASHER SYSTEM

Symptom	Suspect Area	See page
Wiper and washers do not operate.*1	1. WIPER Fuse (J/B No.1) 2. Ignition Switch 3. Wiper Switch 4. Wiper Motor 5. Wire Harness	BE-16 BE-22 BE-55 BE-55
Wiper and washers do not operate.*2	1. WIPER Fuse (J/B No.1) 2. Ignition Switch 3. Wiper Switch 4. Wiper Motor 5. Wire Harness	BE-16 BE-22 BE-55 BE-55
Wiper and washers do not operate.*3	1. WIPER Fuse (J/B No.1) 2. Wiper Switch 3. Wiper Motor 4. Wire Harness	BE-16 BE-55 BE-55
Wipers do not operate in LO, HI or MIST.	1. Wiper Switch 2. Wiper Motor 3. Wire Harness	BE-55 BE-55
Wipers do not operate in INT.	1. Wiper Switch 2. Wiper Motor 3. Wire Harness	BE-55 BE-55
Washer motor does not operate.	1. Washer Switch 2. Washer Motor 3. Wire Harness	BE-55 BE-55
Wipers do not operate when washer switch in ON.	1. Washer Motor 2. Wire Harness	BE-55
Washer fluid does not spray.	1. Washer Hose and Nozzle	

*1: Door Lock and Power Window do not operate.

*2: Door Lock and Power Window are normal. Combination Meter and Turn Signal do not operate.

*3: Combination Meter and Turn Signal are normal.

COMBINATION METER

Symptom	Suspect Area	See page
Open Door	1. Bulb 2. DOME Fuse (R/B No.2) 3. Courtesy Switch (Door) 4. Wire Harness	BE-16 BE-47
SRS	1. Bulb 2. ECU-B Fuse (J/B No.1) 3. Wire Harness 4. Other Parts* ¹	BE-16
Discharge	1. Bulb 2. IGN Fuse (J/B No.1) 3. Wire Harness 4. Other Parts* ²	BE-16
Brake	1. Bulb 2. GAUGE Fuse (J/B No.1) 3. Brake Fluid Level Warning Switch 4. Parking Brake Switch	BE-16 BE-86 BE-86
TRAC (w/ TRAC)	1. Bulb 2. GAUGE Fuse (J/B No.1) 3. Wire Harness 4. Other Parts* ³	BE-16
Malfunction	1. Bulb 2. GAUGE Fuse (J/B No.1) 3. Wire Harness 4. Other Parts* ⁴	BE-16
Low Oil Pressure	1. Bulb 2. GAUGE Fuse (J/B No.1) 3. Low Oil Pressure Warning Switch 4. Wire Harness	BE-16 BE-86
Seat Belt	1. Bulb 2. GAUGE Fuse (J/B No.1) 3. Seat Belt Warning Relay (Integration Relay) 4. Wire Harness 5. Other Parts* ⁵	BE-16 BE-86
Light Failure	1. Bulb 2. GAUGE Fuse (J/B No.1) 3. Light Failure Sensor 4. Wire Harness	BE-16 BE-86

*1: Center Airbag Sensor Assembly

*2: Generator

*3: ABS and TRAC ECU

*4: ECM

*5: Buckle Switch

POWER WINDOW CONTROL SYSTEM

Symptom	Suspect Area	See page
*1 Power window does not operate	1. PWR Fuse (J/B No.1) 2. Theft Deterrent and Door Lock Control ECU 3. Wire Harness	BE-16 DI-723
*2 Power window does not operate	1. ECU-IG Fuse (J/B No.1) 2. Ignition Switch 3. DOME Fuse (R/B No.2) 4. Theft Deterrent and Door Lock Control ECU 5. PWR Fuse (J/B No.1) 6. Power Window Main Relay (J/B No.1) 7. Power Window Master Switch 8. Wire Harness	BE-16 BE-22 BE-16 DI-723 BE-16 BE-109 BE-109
"One Touch Power Window System" does not operate	1. Power Window Master Switch	BE-109
Only one window glass does not move	1. Power Window Master Switch 2. Power Window Switch 3. Power Window Motor 4. Wire Harness	BE-109 BE-109 BE-109
"Window Lock System" does not operate	1. Power Window Master Switch	BE-109
"Window Lock Illumination" does not light up	1. Power Window Master Switch	BE-109
Key-off power window does not operate	1. DOME Fuse (R/B No.2) 2. Theft Deterrent and Door Lock Control ECU 3. ECU-IG Fuse (J/B No.1) 4. Ignition Switch 5. Door Open Detection Switch 6. Wire Harness	BE-16 DI-723 BE-16 BE-22 DI-688

*1: Door Lock does not operate.

*2: Door Lock is normal.

SEAT HEATER SYSTEM

Symptom	Suspect Area	See page
Seat heaters do not operate. (Driver's and Passenger's)	1. ST HTR Fuse (R/B No.4) 2. IG MAIN Relay (R/B No.4) 3. Seat heater switch 4. Wire Harness 5. Seat Heater	BE-16 BE-138 BE-138 BE-138
Seat heater temperature is too hot.	1. Seat Heater	BE-138

ELECTRO CHROMIC MIRROR SYSTEM

Symptom	Suspect Area	See page
Electro Chromic Inner Mirror does not operate.	1. DOME Fuse (R/B No.2) 2. Electro Chromic Inner Mirror 3. Key Unlock Warning Switch 4. Wire Harness	BE-16 BE-135 BE-22
Electro Chromic Outer Mirror does not operate.	1. DOME Fuse (R/B No.2) 2. Electro Chromic Outer Mirror 3. Electro Chromic Inner Mirror 4. Key Unlock Warning Switch 5. Wire Harness	BE-16 BE-135 BE-135 BE-22

ELECTRIC TENSION REDUCER SYSTEM

Symptom	Suspect Area	See page
Tension Reducer does not operate. (Driver's and Passenger's)	1. GAUGE Fuse (J/B No.1) 2. Wire Harness	BE-16
Tension Reducer does not operate. (Only one side)	1. Buckle Switch 2. Tension Reducer Solenoid	BE-102 BE-102

DEFOGGER SYSTEM

Symptom	Suspect Area	See page
All defogger systems do not operate.	1. HEATER Fuse (J/B No.1) 2. DEFOG Fuse (R/B No.2) 3. Defogger Switch 4. Defogger Relay 5. Wire Harness	BE-16 BE-16 BE-105 BE-105
Rear window defogger does not operate.	1. Defogger Wire 2. Mirror Defogger 3. Wire Harness	BE-105 BE-105
Mirror defogger does not operate.	1. MIR-HTR Fuse (J/B No.1) 2. Mirror Defogger 3. Wire Harness	BE-16 BE-105

SLIDING ROOF SYSTEM

Symptom	Suspect Area	See page
*1 Sliding roof system does not operate.	1. DOOR Fuse (J/B No.1) 2. Theft Deterrent and Door Lock Control ECU 3. Wire Harness	BE-16 DI-723
*2 Sliding roof system does not operate.	1. ECU-IG Fuse (J/B No.1) 2. Ignition Switch 3. DOOR Fuse (J/B No.1) 4. Theft Deterrent and Door Lock Control ECU 5. PWR Fuse (J/B No.1) 6. Power Main Relay 7. Sliding Roof Control Relay 8. Sliding Roof Switch 9. Sliding Roof Motor 10. Wire Harness	BE-16 BE-22 BE-16 DI-723 BE-16 BE-117 BE-117 BE-117 BE-117
Sliding roof system operates abnormally.	1. Sliding Roof Control Relay 2. Limit Switch 3. Sliding Roof Switch 4. Wire Harness	BE-117 BE-117 BE-117
Sliding roof system stops operation half way.	1. Sliding Roof Control Relay 2. Limit Switch 3. Sliding Roof Switch 4. Sliding Roof Motor (Stones or foreign material trapped in motor assembly)	BE-117 BE-117 BE-117 BE-117
"Key-off Sliding Roof" operation does not operate.	1. DOME Fuse (R/B No.2) 2. Theft Deterrent and Door Lock Control ECU 3. ECU-IG Fuse (J/B No.1) 4. Ignition Switch 5. Door Open Detection Switch 6. Wire Harness	BE-16 DI-723 BE-16 BE-22 DI-688

*1: Door Lock does not operate

*2: Door Lock is normal

POWER MIRROR CONTROL SYSTEM

Symptom	Suspect Area	See page
Mirror does not operate.	1. RADIO No.2 Fuse (J/B No.1) 2. DOME Fuse (R/B No.2) 3. Mirror Switch 4. Mirror Motor 5. Mirror ECU 6. Wire Harness	BE-16 BE-16 BE-129 BE-129 BE-129
Mirror operates abnormally.	1. Mirror Switch 2. Mirror Motor 3. Mirror ECU 4. Wire Harness	BE-129 BE-129 BE-129
Mirror does not return to the memorized position. (w/ Driving Position Memory System)	1. Driving Position Memory (Position is not set) 2. Driving Position Switch 3. Tilt and Telescopic ECU 4. Mirror ECU 5. Mirror Sensor 6. Wire Harness	BE-129 BE-129 BE-129 BE-129
Mirror returns to a position which is not memorized. (w/ Driving Position Memory System)	1. Mirror ECU 2. Mirror Sensor 3. Wire Harness	BE-129 BE-129

FUEL LID OPENER SYSTEM

Symptom	Suspect Area	See page
Fuel lid opener system does not operate.	1. DOOR Fuse (J/B No.1) 2. Fuel Lid Opener Switch 3. Fuel Lid Opener Solenoid 4. Wire Harness	BE-16 BE-142 BE-142

HORN SYSTEM

Symptom	Suspect Area	See page
Horn system does not operate.	1. HAZ-HORN Fuse (R/B No.2) 2. Horn Relay (R/B No.2) 3. Horn Switch 4. Horn 5. Wire Harness	BE-16 BE-199 BE-199 BE-199
Horn blow all the time.	1. Horn Relay (R/B No.2) 2. Horn Switch 3. Wire Harness	BE-199 BE-199
One horn operates but other horn does not operate.	1. Horn 2. Wire Harness	BE-199
Horns operate abnormally.	1. Horn Relay (R/B No.2) 2. Horn 3. Wire Harness	BE-16 BE-199

POWER SEAT CONTROL SYSTEM

Symptom	Suspect Area	See page
Power seat does not operate. (Door lock does not operate.)	1. DOOR M-Fuse (J/B No.1) 2. Wire Harness 3. Power Seat Switch (Driver's) 4. Power Seat Switch (Passenger's)	BE-16 BE-121 BE-121
Power seat does not operate. (Door lock is normal.)	1. DOOR M-Fuse (J/B No.1) 2. Wire Harness 3. Power Seat Switch (Driver's) 4. Power Seat Switch (Passenger's)	BE-16 BE-121 BE-121
Driver's seat does not operate.	1. Power Seat Switch (Driver's) 2. Wire Harness	BE-121
Passenger's seat does not operate.	1. Power Seat Switch (Passenger's) 2. Wire Harness	BE-121
"Slide operation" does not operate.	1. Power Seat Switch (Driver's) 2. Power Seat Switch (Passenger's) 3. Wire Harness 4. Slide Motor (D,P)	BE-121 BE-121 BE-121
"Front Vertical Operation" does not operate.	1. Power Seat Switch (Driver's) 2. Power Seat Switch (Passenger's) 3. Wire Harness 4. Front Vertical Motor (D,P)	BE-121 BE-121 BE-121
"Rear Vertical Operation" does not operate.	1. Power Seat Switch (Driver's) 2. Power Seat Switch (Passenger's) 3. Wire Harness 4. Rear Vertical Motor (D,P)	BE-121 BE-121 BE-121
"Reclining Operation" does not operate.	1. Power Seat Switch (Driver's) 2. Power Seat Switch (Passenger's) 3. Wire Harness 4. Reclining Motor (D,P)	BE-121 BE-121 BE-121
"Lumbar Support Operation" does not operate.	1. Power Seat Switch (Driver's) 2. Power Seat Switch (Passenger's) 3. Wire Harness 4. Lumbar Support Motor (D,P)	BE-121 BE-121 BE-121

(D): Driver's Seat

(P): Passenger's Seat