



CIRCUIT

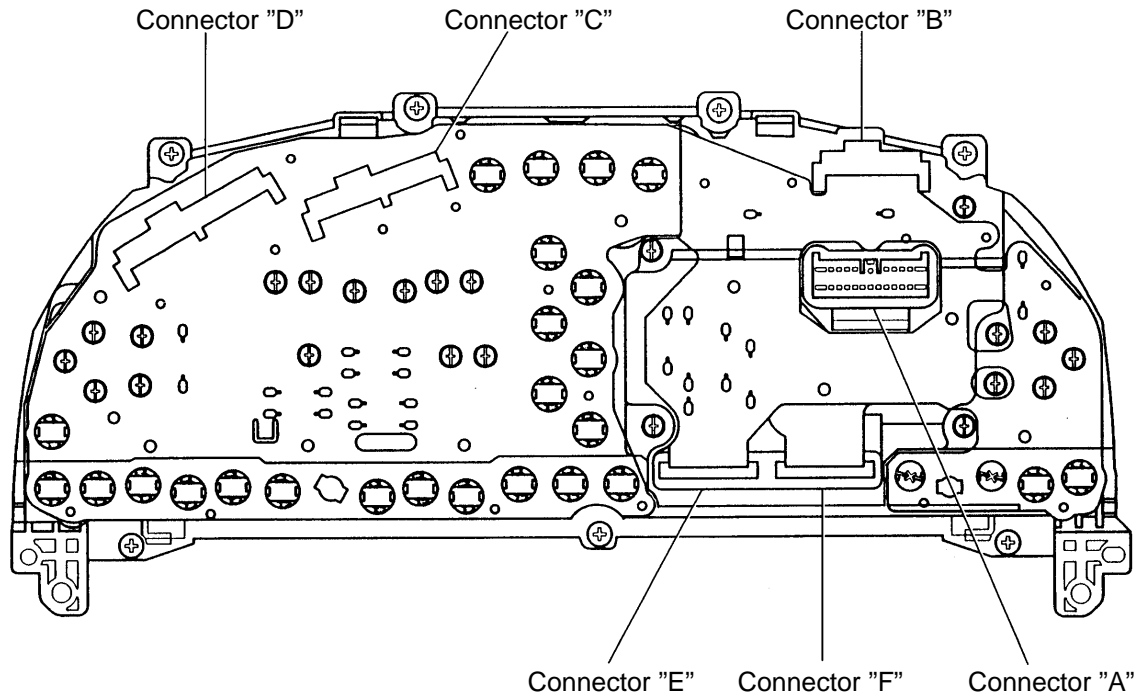


Combination Meter


Connector "A"

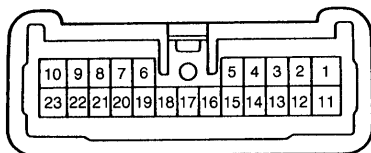


Connector "B"

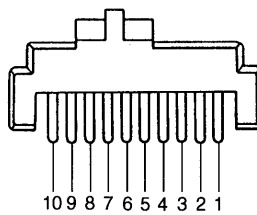


Connector "C"

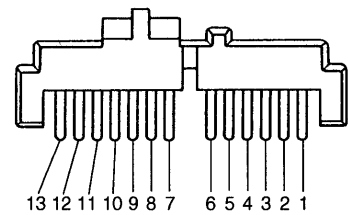


Connector "D"

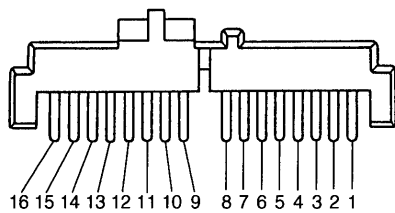

Connector "E"

 


Connector "F"

 

N21324
BE6284 N21228 N21229
N21330 N02952 BE6288

Z19356

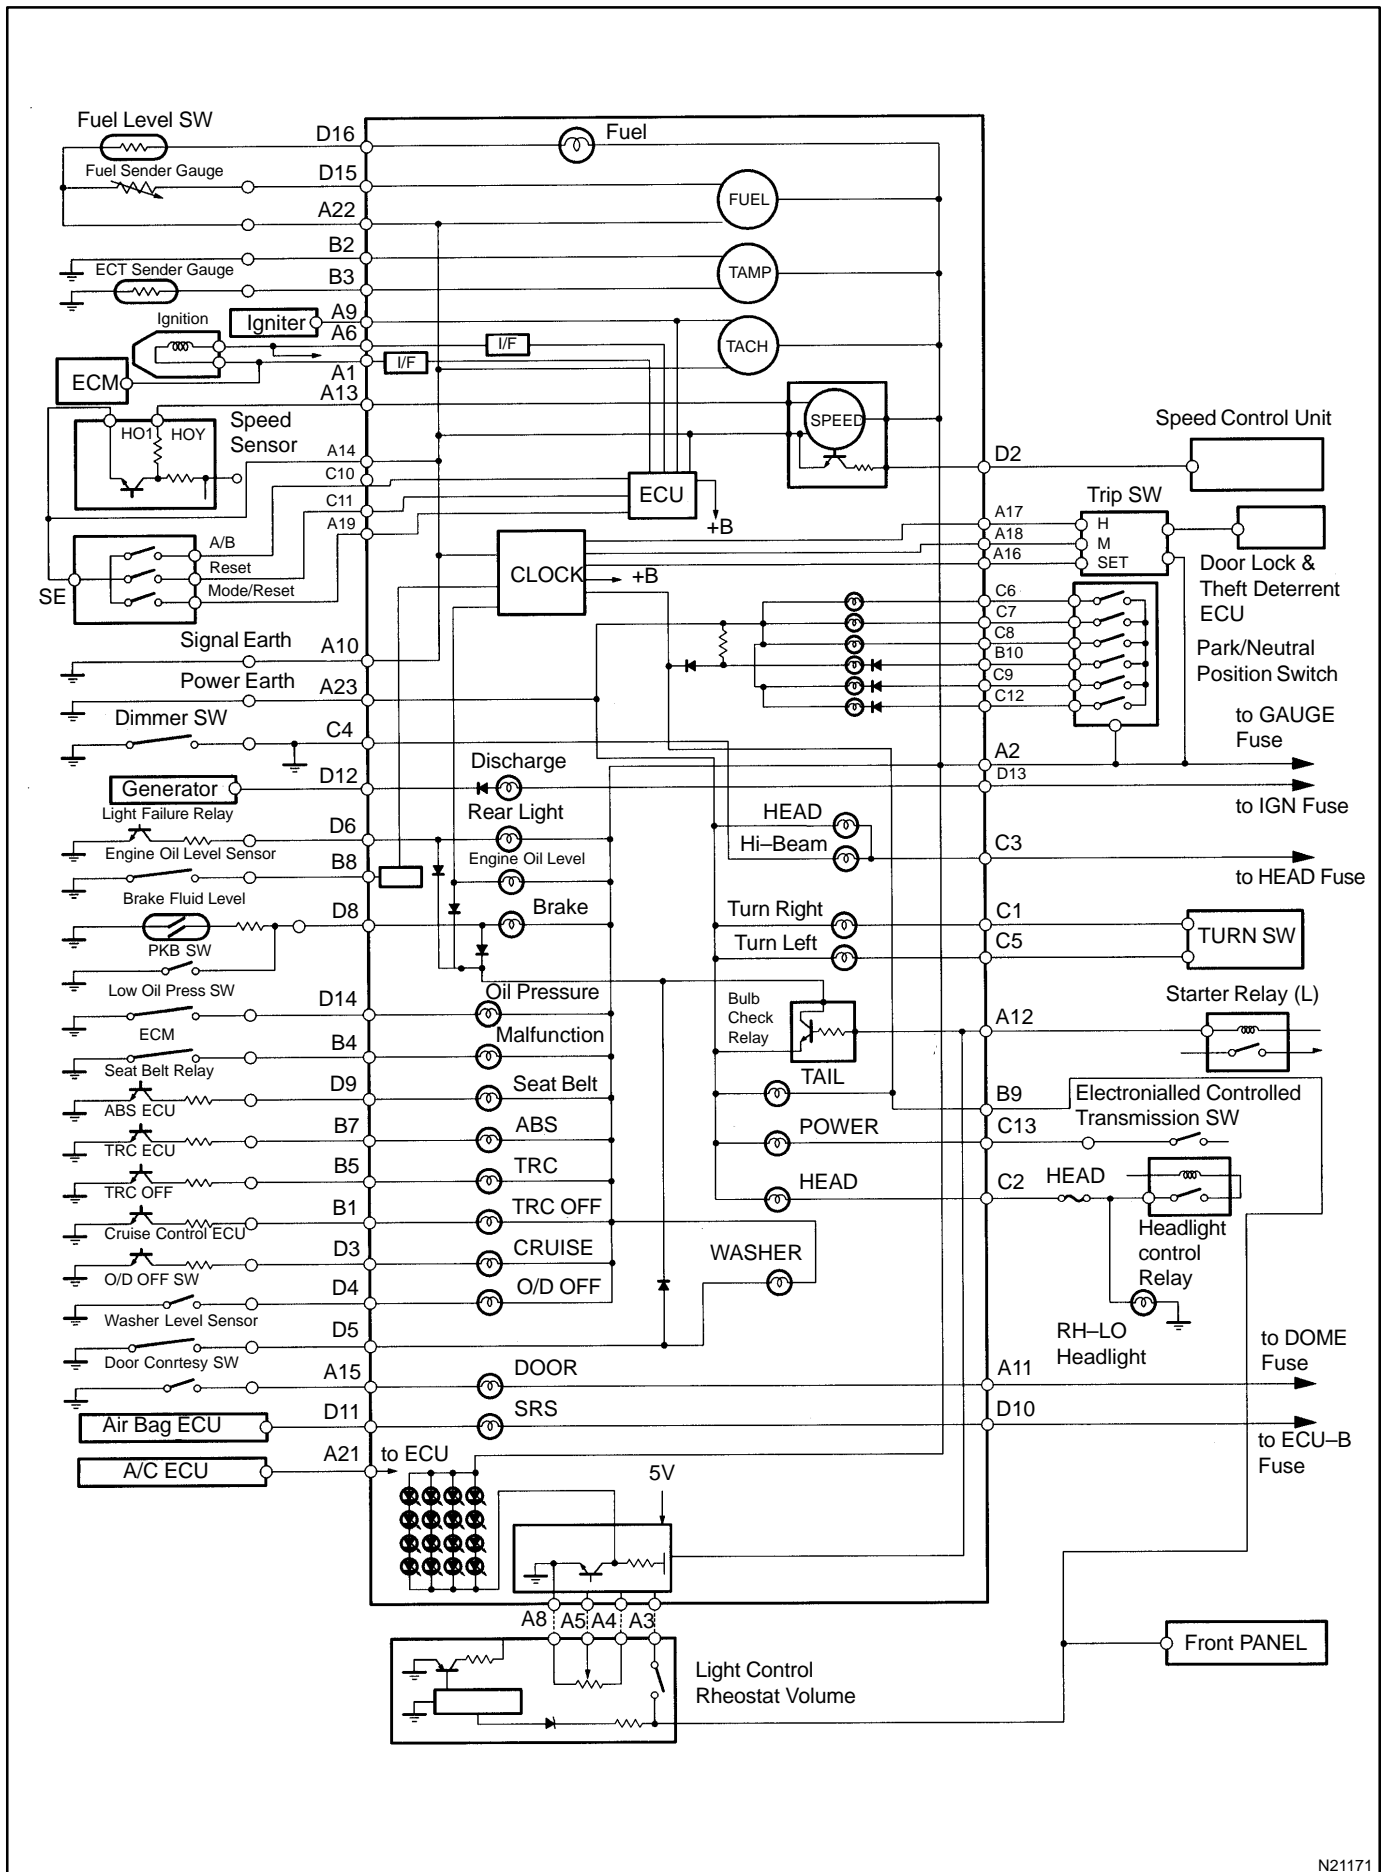

N21171

A	1	ECM
	2	GAUGE Fuse
	3	Light Control Rheostat (Taillight Switch)
	4	Light Control Rheostat (Volume)
	5	Light Control Rheostat (Volume)
	6	Ignition
	7	—
	8	Light Control Rheostat (Volume)
	9	Igniter
	10	Ground (Signal Earth)
	11	DOME Fuse
	12	Starter Relay
	13	ABS ECU
	14	Ground
	15	Door Courtesy Switch
	16	Trip Switch (SET)
	17	Trip Switch (H)
	18	Trip Switch (M)
	19	MODE/RESET Switch
	20	—
	21	A/C ECU
	22	Fuel Sender Gauge Earth
	23	Ground (Power Earth)
B	1	TRAC ECU
	2	Ground (Engine Earth)
	3	Engine Coolant Temperature Sender Gauge
	4	ECM
	5	TRAC ECU
	6	—
	7	ABS ECU
	8	Engine Oil Level Warning Sensor
	9	Light Control Rheostat
	10	Park/neutral Position Switch (D)
C	1	Turn Signal Switch (Right)
	2	Headlight Control Telay
	3	HEAD Fuse
	4	Headlights
	5	Turn Signal Switch (Left)
	6	Park/Neutral Position Switch (P)
	7	Park/Neutral Position Switch (R)
	8	Park/Neutral Position Switch (N)
	9	Park/Neutral Position Switch (2)
	10	Odometer and Twin Switch (A/B Switch)
	11	Odometer and Twin Switch (Reset Switch)
	12	Park/Neutral Position Switch (L)
	13	Pattern Select Switch
D	1	—
	2	Speed Sensor – 4 pulse
	3	ECM
	4	ECM
	5	Washer Level Warning Switch
	6	Light Failure Sensor
	7	Integration Relay
	8	Brake Fluid Level Warning Switch
	9	—
	10	ECU-B Fuse
	11	Aiebag Sensor Assembly
	12	Generator – L terminal
	13	CHARGE Fuse
	14	Low Oil Pressure Warning Switch
	15	Fuel Sender Gauge
	16	Fuel Level Warning Switch