


## DISASSEMBLY


### 1. REMOVE METER GLASS

- (a) Remove the 8 screws.
- (b) Remove the character plate from the meter plate.

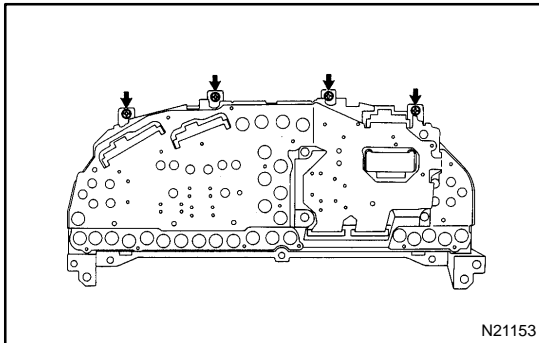


### 2. REMOVE METER PLATE

- (a) Remove the 4 screws.
- (b) Remove the meter plate from the meter case.

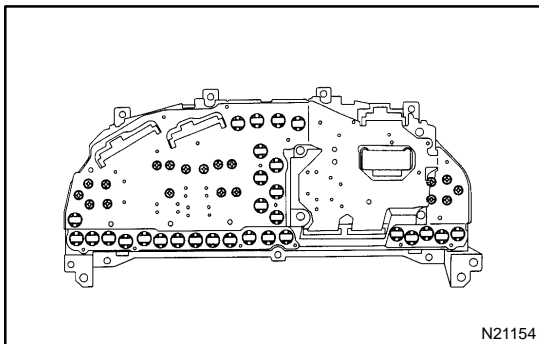



### 3. REMOVE METER CIRCUIT PLATE

- (a) Remove the 19 screws.
- (b) Disconnect the 2 connectors from the meter circuit plate.
- (c) Remove the bulbs from the meter circuit plate.

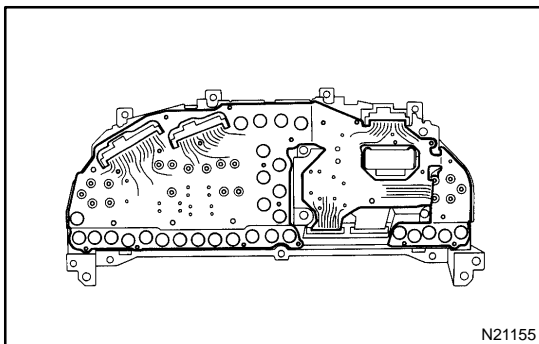


- (d) Remove the 2 meter circuit plate.

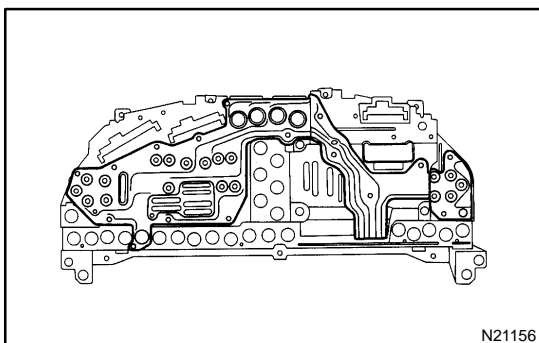

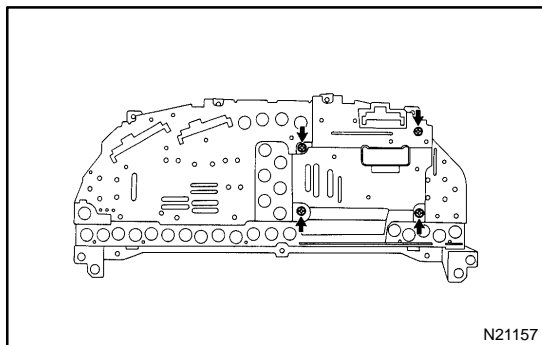**4. REMOVE CHARACTER PLATE**

Remove the 4 screws from the meter case.

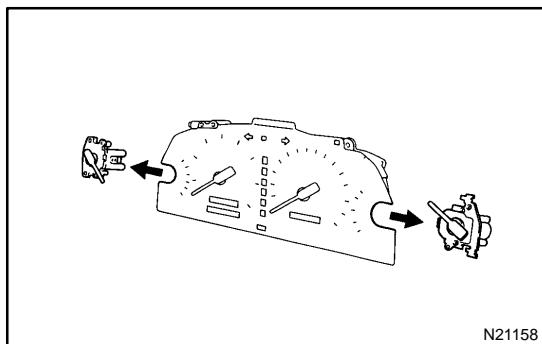**5. REMOVE FUEL AND TEMPERATURE GAUGE**

Release the 4 lugs, and separate the 2 gauges from the meter lens.

HINT:

To reassemble, follow the disassemble procedure in reverse.