


INSPECTION

1. INSPECT RHEOSTAT LIGHT CONTROL VOLUME RESISTANCE

Condition	Tester connection	Specified condition
Constant	3 – 4	Approx. 10kΩ
Rheostat knob turned A	1 – 3	∞
Rheostat knob turned B	1 – 3	Approx. 10kΩ → 0Ω


If resistance is not as specified, replace the rheostat light control volume.

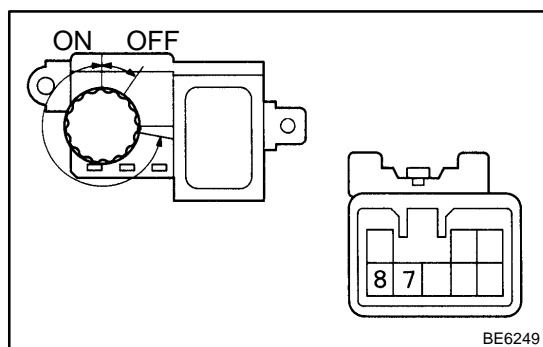

2. INSPECT TAILLIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	7 – 8	Continuity


If operation is not as specified, replace the rheostat light control volume.

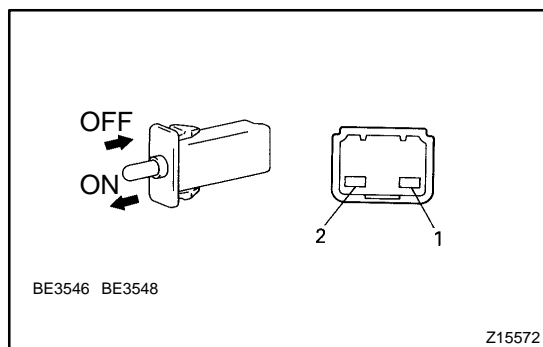

3. INSPECT GLOVE BOX LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	1 – 2	Continuity

If continuity is not as specified, replace the switch.

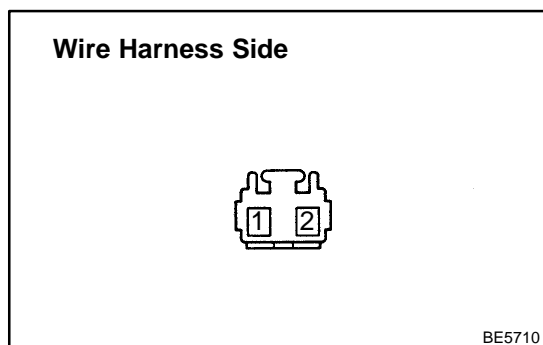

4. INSPECT GLOVE BOX LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

BODY ELECTRICAL – ILLUMINATION LIGHT SYSTEM

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
1 – Ground	Light control switch OFF	No voltage
1 – Ground	Light control switch TAIL or HEAD	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.