

POWER SOURCE

DESCRIPTION

BE0KH-01

HINT:

The power source supplies power to each of the vehicle's electrical devices. It is composed of the battery, fuses and relays, which are located centrally at relay block No.2 and relay block No.6 in the engine compartment and junction block No.1, relay block No.4 and relay block No.5 in the cabin near the driver's feet.

RELATED SYSTEMS FOR EACH FUSIBLE LINK, MEDIUM CURRENT FUSE AND FUSE

Parts Name	Related Systems or Parts	Related Systems or Parts
IGN	<ul style="list-style-type: none"> Charging System Engine 	<ul style="list-style-type: none"> Supplemental Restraint System ABS and TRAC System
ST	<ul style="list-style-type: none"> Starter 	
WIPER	<ul style="list-style-type: none"> Wiper and Washer System 	
HTR	<ul style="list-style-type: none"> Defogger System 	<ul style="list-style-type: none"> A/C System
ENGINE	<ul style="list-style-type: none"> Charging System 	
RADIO NO.2	<ul style="list-style-type: none"> Audio System 	<ul style="list-style-type: none"> Power Mirror System
CIG	<ul style="list-style-type: none"> Cigarette Lighter Combination Meter System Shift Lock System 	<ul style="list-style-type: none"> A/C System Supplemental Restraint System Theft Deterrent System
STOP	<ul style="list-style-type: none"> Stop Light System 	<ul style="list-style-type: none"> Cruise Control System
TURN	<ul style="list-style-type: none"> Turn Signal and Hazard Warning System 	
MIR HTR	<ul style="list-style-type: none"> Mirror Defogger System 	
PANEL	<ul style="list-style-type: none"> Illumination Light System 	
ECU-B	<ul style="list-style-type: none"> Combination Meter System Power Mirror System 	<ul style="list-style-type: none"> Supplemental Restraint System Automatic Light Control System
GAUGE	<ul style="list-style-type: none"> Combination Meter System Back-up Light System Light Failure Sensor 	<ul style="list-style-type: none"> Electronically Controlled Transmission System Transmission Indicator
ECU-IG	<ul style="list-style-type: none"> Power Seat System TEL System Radiator Fan System Electric Tension Reducer System Auto-Tilt away Steering System ABS and TRAC System 	<ul style="list-style-type: none"> Door Lock Control System Shift Lock System Auto Antenna System Power Steering System Cruise Control System Automatic Light Control System
TAIL	<ul style="list-style-type: none"> Taillight System Parking Light System 	<ul style="list-style-type: none"> Side Marker Light
DOOR	<ul style="list-style-type: none"> Power Seat System Door Lock Control System 	<ul style="list-style-type: none"> Luggage Door Opener System Fuel Lid Opener System
IG SW	Upstream of ECU-IG, ENGINE, WIP, HTR, TURN, GAUGE AND ST Fuse	
PWR	<ul style="list-style-type: none"> Power Window System Auto-Tilt away Steering System 	<ul style="list-style-type: none"> Sliding Roof System
ABS NO.1	<ul style="list-style-type: none"> ABS and TRAC System 	
AM1	Upstream of ST HTR, Ignition Switch, TAIL, PANEL, STOP, ECU-B, DOOR and PWR Fuse	
ALT	Upstream of AM1, and ABS No.1 Fuse	
MAIN	Upstream of ALT-S, TRAC, HAZ-HORN, DOME, RADIO NO.1, TEL, HEAD, DRL Fuse	
AM2	<ul style="list-style-type: none"> Upstream of INJ Fuse 	<ul style="list-style-type: none"> Engine
INJ	<ul style="list-style-type: none"> Upstream of ING Fuse 	<ul style="list-style-type: none"> Engine

HTR	<ul style="list-style-type: none"> ● Blower Motor 	
DEF	<ul style="list-style-type: none"> ● Defogger System 	<ul style="list-style-type: none"> ● Mirror Defogger System
DOME	<ul style="list-style-type: none"> ● Power Seat System ● A/C System ● Combination Meter System ● ABS and TRAC System ● Cruise Control System ● Theft Deterrent System 	<ul style="list-style-type: none"> ● Sliding Roof System ● Liquid Crystal Inner Mirror System ● Interior Light System ● Wireless Door Lock Control System ● Auto Tilt-away Steering System
EFI	<ul style="list-style-type: none"> ● Engine 	
HAZ-HORN	<ul style="list-style-type: none"> ● Turn Signal and Hazard Warning System 	<ul style="list-style-type: none"> ● Horn System
RADIO NO.1	<ul style="list-style-type: none"> ● Audio System 	
TEL	<ul style="list-style-type: none"> ● TEL System 	
ALT-S	<ul style="list-style-type: none"> ● Charging System 	
ETCS	<ul style="list-style-type: none"> ● ABS and TRAC System 	
HEAD (RH-LWR)	<ul style="list-style-type: none"> ● Headlight System 	
HEAD (LH-LWR)	<ul style="list-style-type: none"> ● Headlight System 	
DRL	<ul style="list-style-type: none"> ● Daytime Running Light System 	
HEAD (RH-UPR)	<ul style="list-style-type: none"> ● Headlight System 	
HEAD (LH-UPR)	<ul style="list-style-type: none"> ● Headlight System 	