


REMOVAL

1. REMOVE FRONT DOOR BELT MOULDING

Remove these parts:


- (1) Armrest base panel
- (2) Door trim
- (3) Door speaker grille
- (4) Door trim upper panel
- (5) Outside rear view mirror
- (6) Front door belt moulding

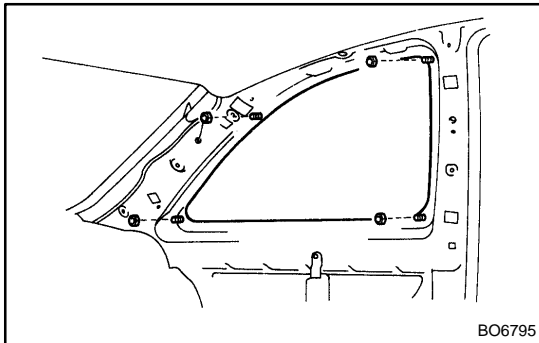

2. REMOVE QUARTER WINDOW GLASS WITH MOULDING

Remove these parts:

- (1) Rear seat cushion
- (2) Rear seatback
- (3) Quarter trim
- (4) Roof side inner garnish
- (5) Shoulder belt anchor
- (6) Quarter window glass with moulding

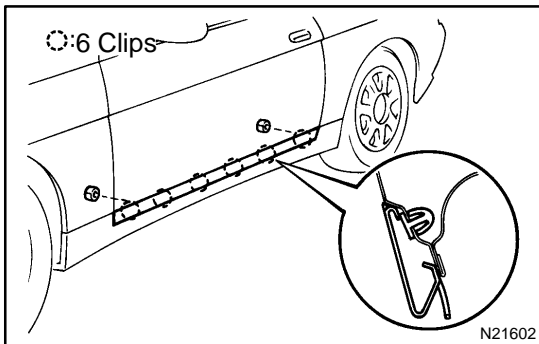

3. REMOVE FRONT DOOR SIDE PROTECTION MOULDING

- (a) Remove the 2 nuts.
- (b) Pry loose clips remove the moulding onto the panel.