


## REMOVAL

### 1. REMOVE THESE PARTS:

- (a) Rear seat cushion and seatback
- (b) Roof side inner garnish
- (c) Package tray trim
- (d) Luggage compartment door


### 2. DISCONNECT REAR SIDE OF ROOF HEADLINING

Pull out the rear end of roof headlining with your hand and disconnect it.

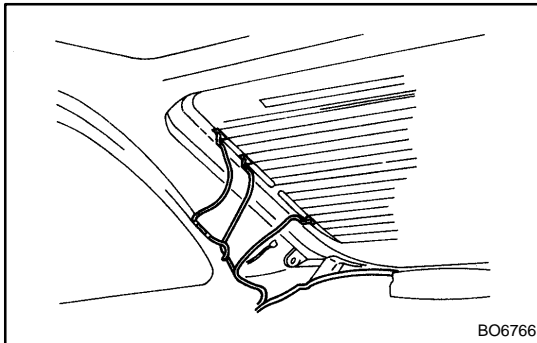

### 3. DISCONNECT CONNECTORS ON BACK WINDOW

Disconnect the 3 connectors on the glass.

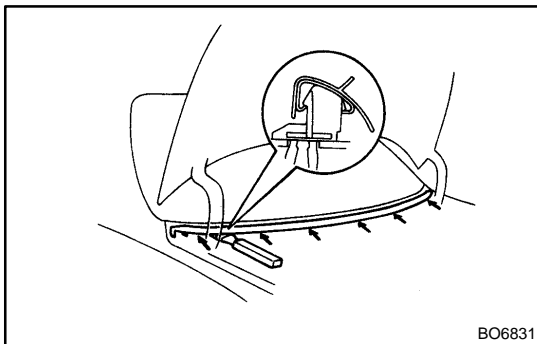


### 4. REMOVE LOWER MOULDING

Using a scraper, pry off the moulding from the 6 clips and remove the moulding.


HINT:

Tape the scraper tip before use.

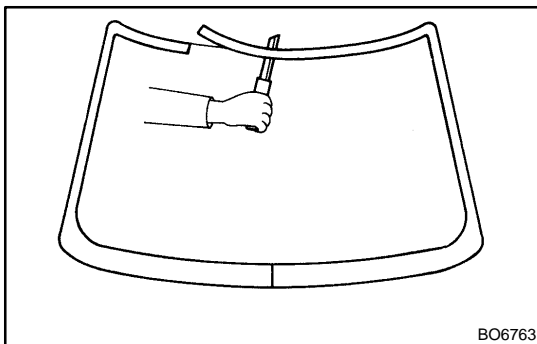

### 5. REMOVE OUTSIDE MOULDING

Using a knife, cut loose the moulding around the glass.

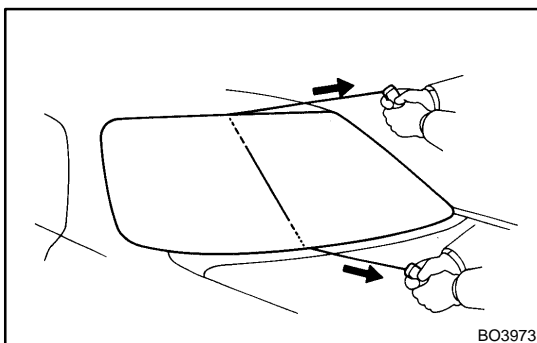


### 6. REMOVE BACK WINDOW GLASS

- (a) Push the piano wire through from the interior.
- (b) Tie both wire ends to a wooden block.

HINT:

Apply adhesive tape to the outer surface to keep the surface from being scratched.

- (c) Cut the adhesive by pulling the piano wire around it.

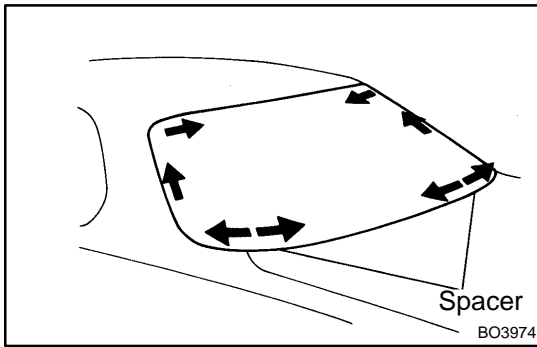**NOTICE:****Do not damage the 2 stoppers with the wire.**

(d) Remove the glass.