

REMOVAL

1. REMOVE FENDER LINER


2. REMOVE HEADLIGHT

Low Beam:

- (a) Remove the bolt, 2 nuts and the headlight.
- (b) Disconnect the connectors.


HINT:

At the time of installation, please refer to the following item.
After installing the headlight, adjust the light aiming.

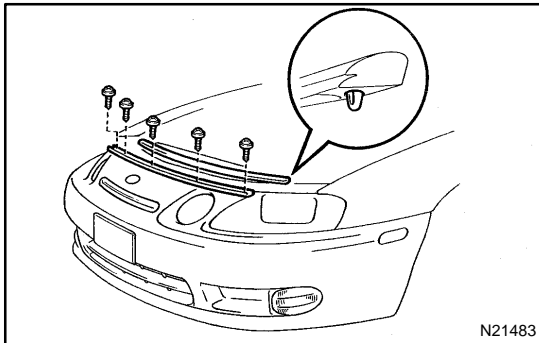

3. REMOVE UPPER BUMPER RETAINER

- (a) Remove the hood seal.
- (b) Remove the 5 screws and upper bumper retainer.

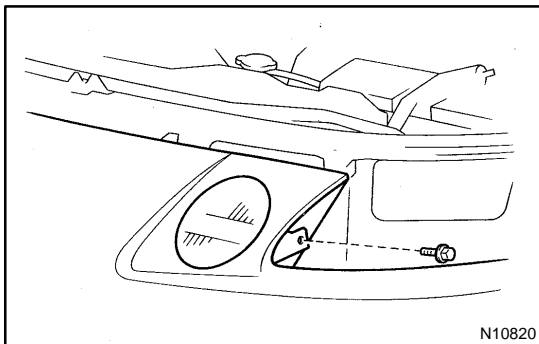


4. REMOVE BUMPER


- (a) Remove headlight side bolt.

NOTICE:


At the time of installation, please refer to the following item.
When installing the bumper on the body, be careful not to damage the serrated part of side bolts.

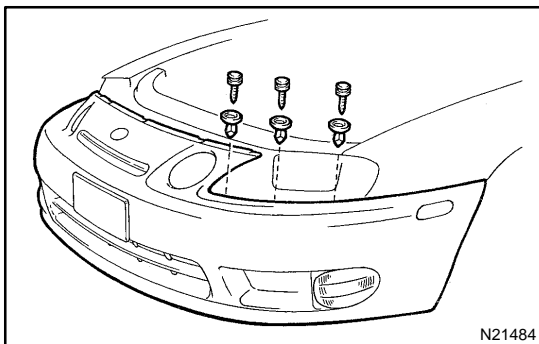

- (b) Remove the 6 clips.

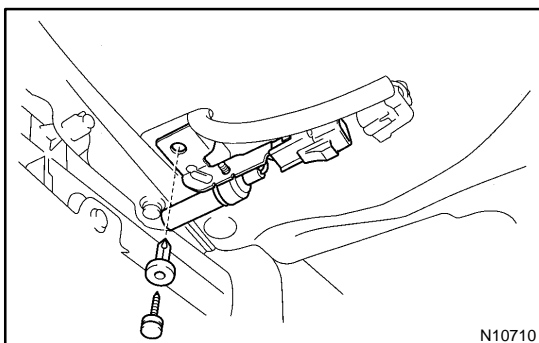

- (c) Remove the clip and ambient temperature sensor.

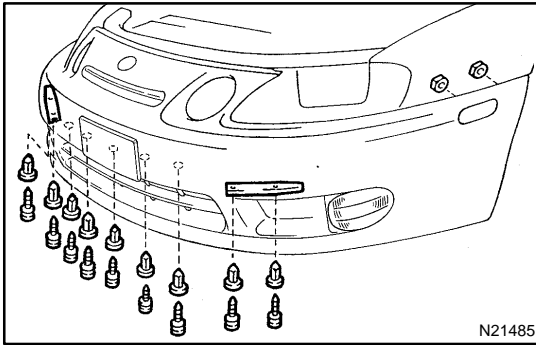


- (d) Remove the 4 nuts.
- (e) Remove the 4 clips and 2 side retainers.
- (f) Remove the 5 clips and center retainer.
- (g) Disconnect the connectors.
- (h) Remove the bumper.

5. REMOVE REINFORCEMENT

Remove the 6 bolts and reinforcement.

Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)

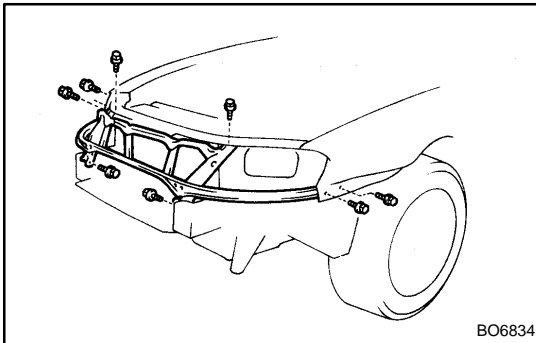

6. REMOVE UPPER REINFORCEMENT

Remove the 8 bolts and upper reinforcement.