
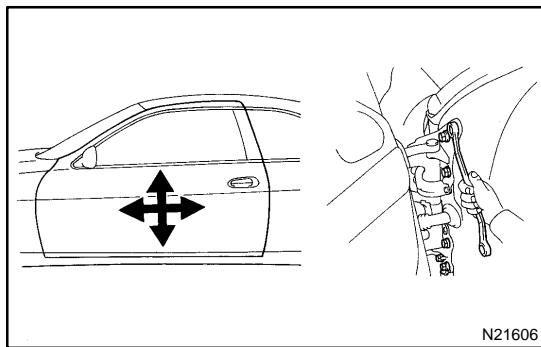


## ADJUSTMENT

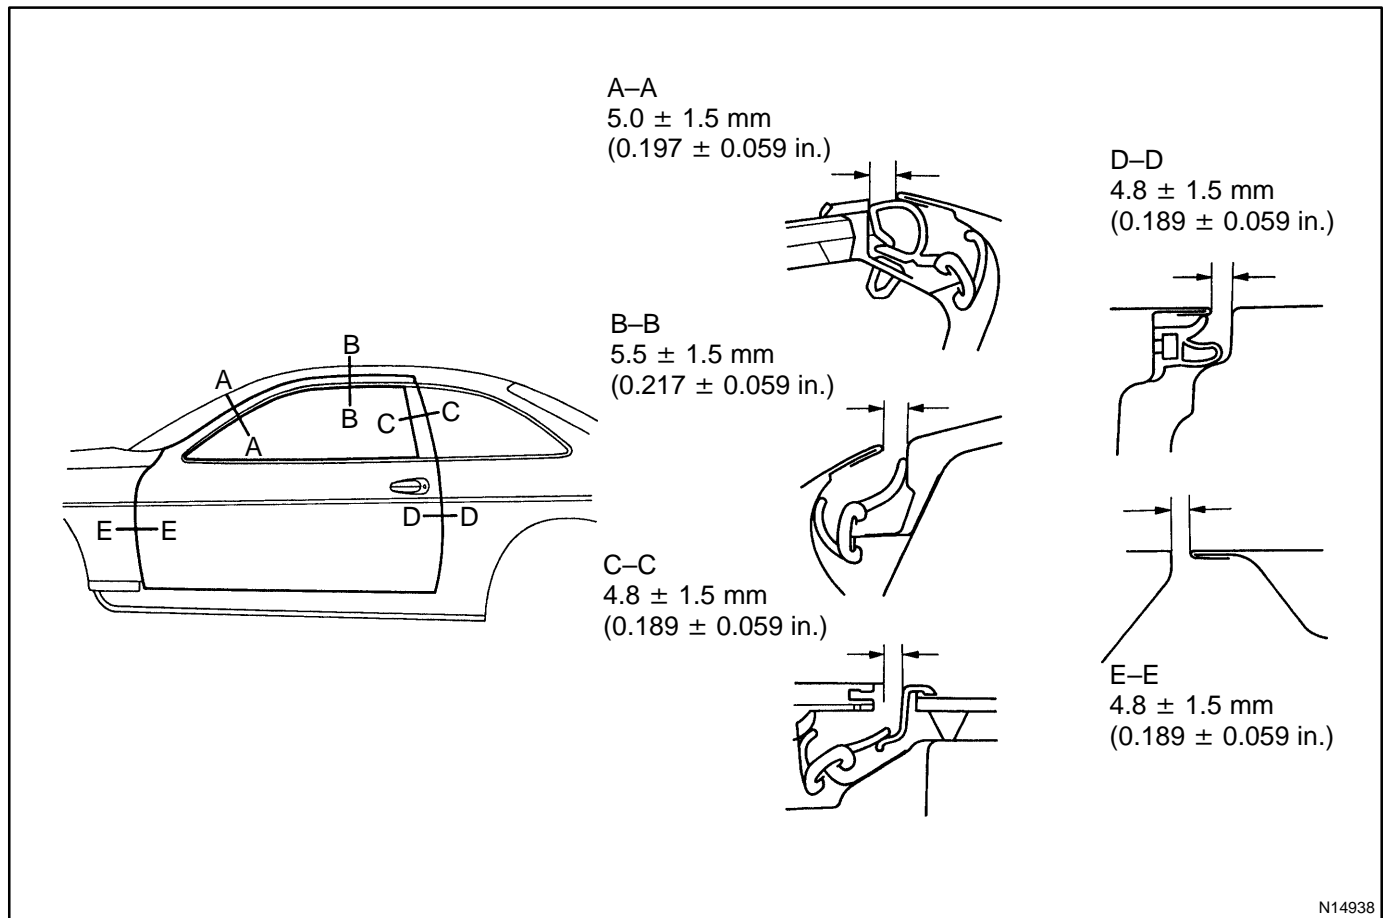


### 1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the body side hinge bolts to adjust the door panel.


HINT:

Remove the pin on the body side before doing adjustment and reinstall it when finished.

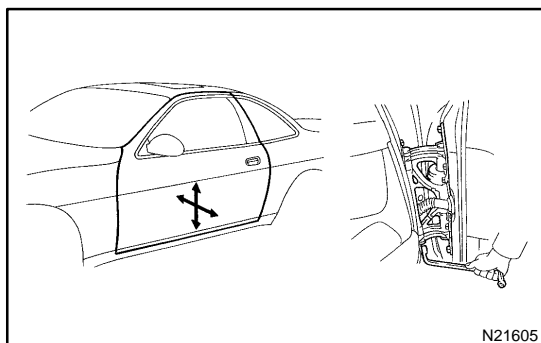

### 2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

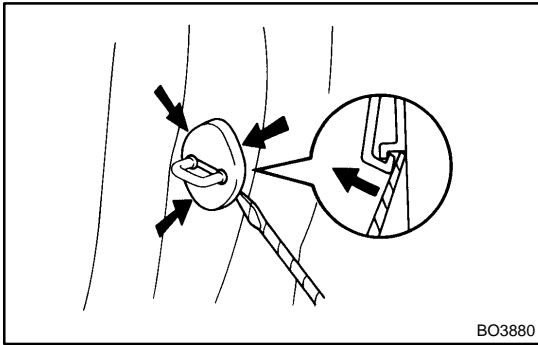


### 3. ADJUST DOOR LOCK STRIKER

- (a) Check that the door fit and door lock linkages are adjusted correctly.

- (b) Using a screwdriver, remove the striker cover.

HINT:

Tape the screwdriver tip before use.

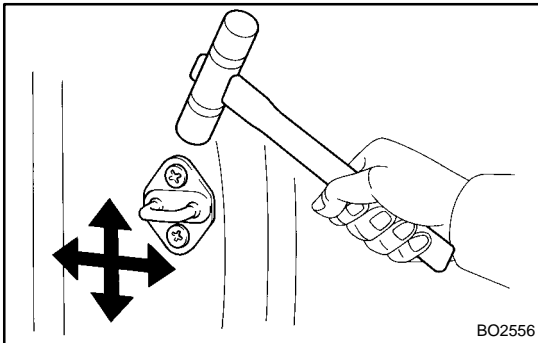

- (c) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer. Tighten the striker mounting screws again.

- (d) Install the striker cover.