


REMOVAL

1. REMOVE FRONT SCUFF PLATE

Using a screwdriver, remove the plate.


HINT:

Tape the screwdriver tip before use.

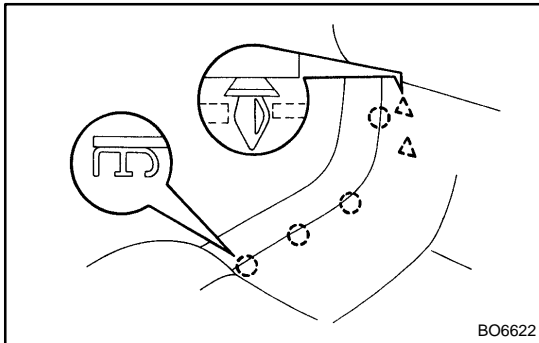


2. DISCONNECT CONNECTORS

(a) Take off the front corner of the floor carpet.

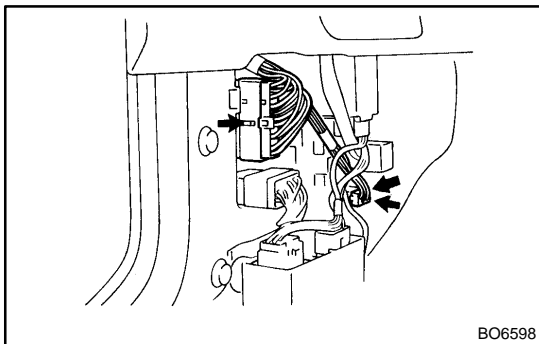

(b) Disconnect the 3 connectors as shown.

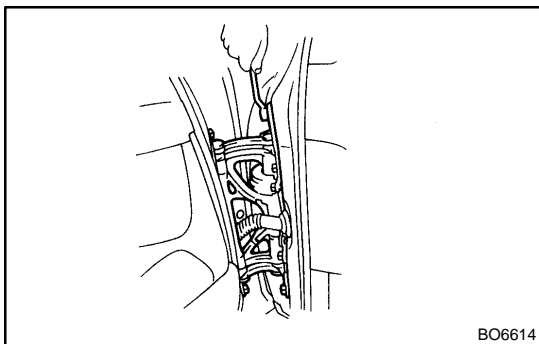

3. REMOVE DOOR

While supporting the door, remove the 6 door hinge bolts to remove the door.

HINT:

After installing the door, adjust the door.

4. REMOVE DOOR HINGE

Remove the 4 bolts and hinge.