

## REMOVAL

### REMOVE THESE PARTS:

- (a) Headrest
- (b) Seat truck covers
- (c) Seat truck cover (Rear Inner Side)
- (d) Front seat

**Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)**