


## REMOVAL

### 1. REMOVE THESE PARTS:

- (a) Floor mat
- (b) Door striker cover
- (c) Trim rear cover
- (d) Trim front cover
- (e) RH side cover

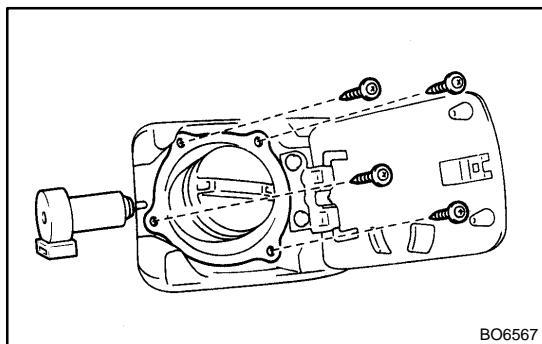


### 2. REMOVE FUEL FILLER LID SHIELD

- (a) Remove the nut and fuel lid opener solenoid.
- (b) Disconnect the connector from the solenoid.
- (c) Remove the 4 screws.
- (d) Remove the fuel tank cap and lid shield.

#### CAUTION:

**Always keep the tank cap closed when it is not required to be open. Keep all fire away during the operation.**

- (e) Install the cap quickly.

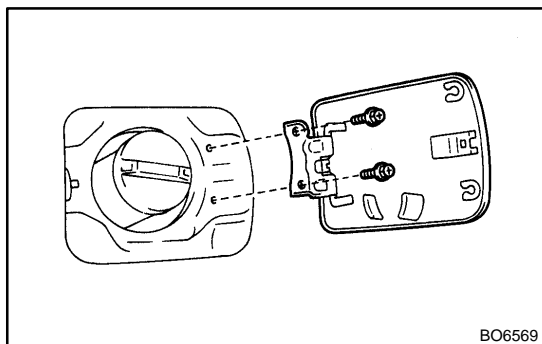

### 3. REMOVE FUEL FILLER OPENING LID

Remove the 2 screws and lid.

#### HINT:

At the time of installation, please refer to the following item.  
When installing the fuel filler opening lid, adjust it.