

## INSTALLATION

### 1. BEFORE INSTALLING PARTS, COAT LOCK WITH MP GREASE

Apply MP grease to the sliding surface of the lock.

### 2. INSTALL HOOD LOCK CONTROL CABLE


- (a) Push the rear side cable through the grommet.
- (b) Using a screwdriver, push the cable stopper into the grommet.

#### HINT:

Tape the screwdriver tip before use.

#### NOTICE:

**Do not damage the grommet with the screwdriver.**

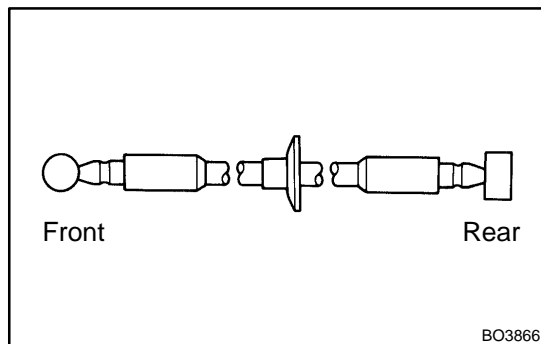

- (c) Clamp the cable to the junction block.
- (d) Pass the front side cable through the upper radiator support.

### 3. INSTALL HOOD RELEASE LEVER

### 4. INSTALL HOOD LOCK TEMPORARILY

### 5. CHECK HOOD LOCK CONTROL FOR PROPER

After checking for proper operation, tighten the nut and the 2 bolts to install the lock.

### 6. INSTALL THESE PARTS:

- (a) Hood release lever
- (b) Fender splash shield
- (c) LH fender liner
- (d) LH front fender wheel opening moulding
- (e) Front bumper