


REMOVAL

1. REMOVE THESE PARTS:

- (a) Front bumper
- (b) LH front fender wheel opening moulding
- (c) LH fender liner
- (d) Fender splash shield
- (e) Hood release lever

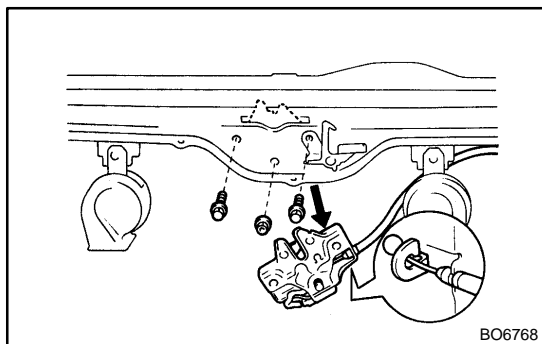



2. REMOVE HOOD LOCK

- (a) Remove the 2 bolts, the nut and hood lock.
- (b) Disconnect the link from the lock.

3. REMOVE HOOD LOCK CONTROL CABLE

- (a) Disconnect the cable from clamps.

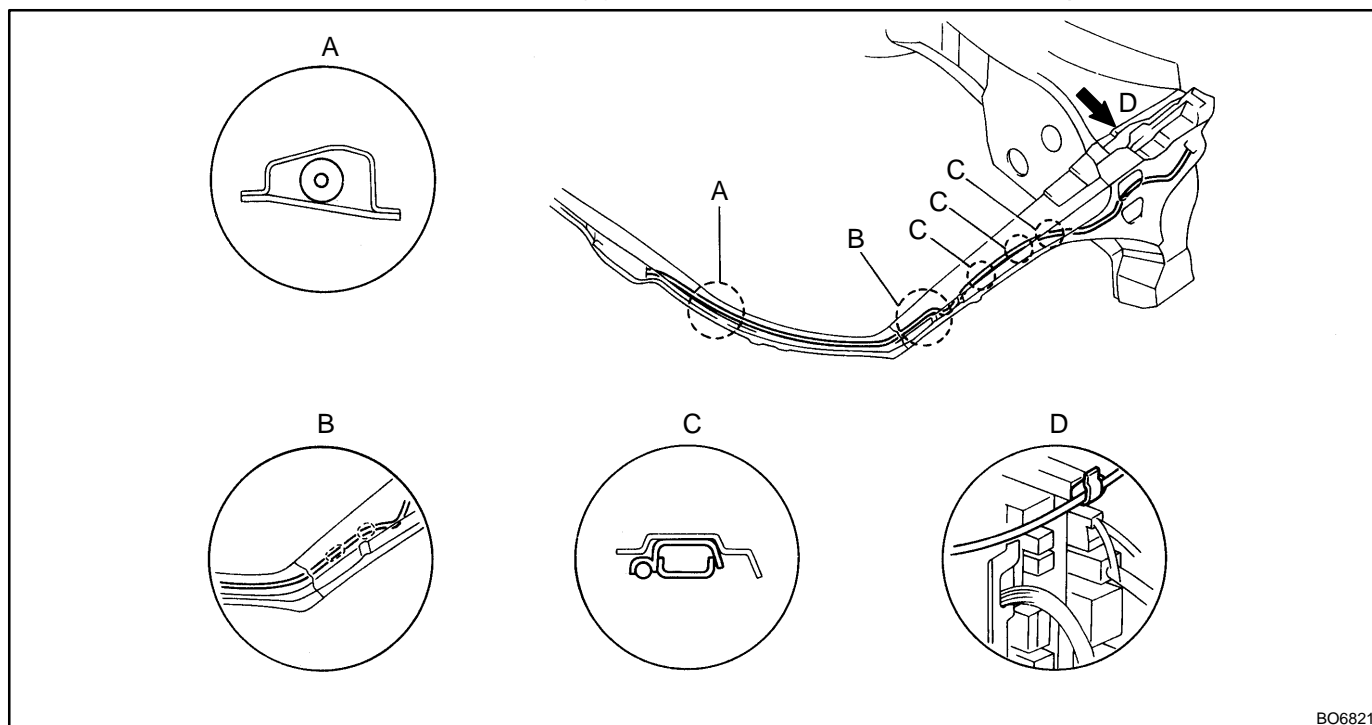

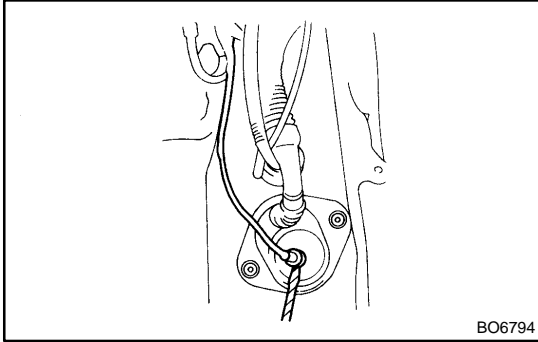


- (b) Using a screwdriver, pry out the cable stopper from the grommet.

HINT:

Tape the screwdriver tip before use.

NOTICE:

Do not damage the grommet with the screwdriver.

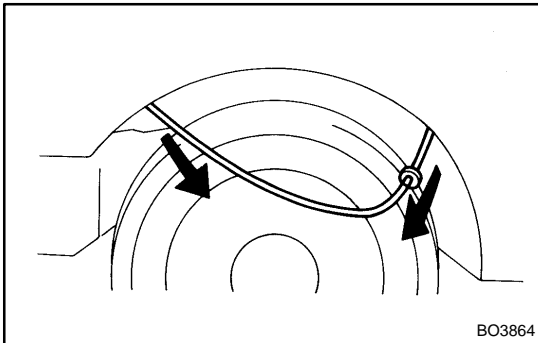

- (c) Pull the cable from front wheel housing to remove it.