
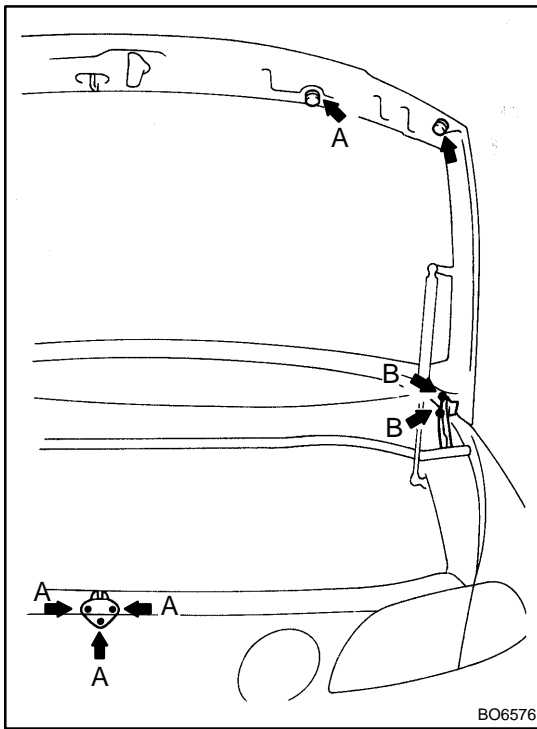


## ADJUSTMENT

### 1. SUBSTITUTE BOLT WITH WASHER FOR CENTERING BOLT

Since the centering bolt is used as the hood hinge set bolt, the hood cannot be adjusted with it on. Substitute the standard bolt for the centering bolt.

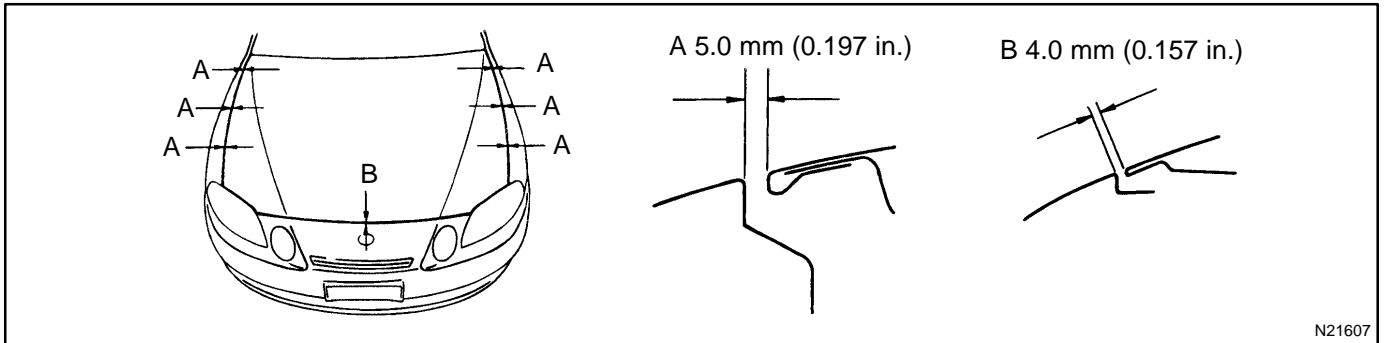

### 2. ADJUST HOOD IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS

Adjust the hood by loosening the B bolts.


**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**

### 3. ADJUST FRONT EDGE OF HOOD IN VERTICAL

Adjust the hood by turning the A and B cushions.

### 4. ADJUST HOOD LOCK

Adjust the lock by loosening the A bolts and nut.

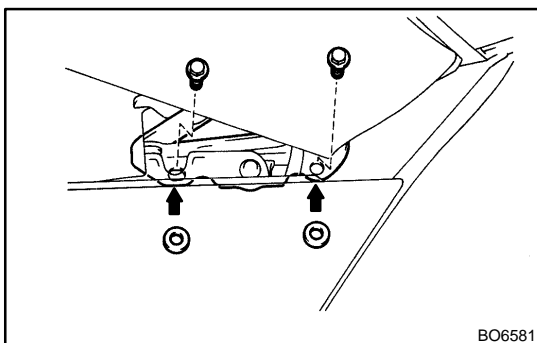

### 5. ADJUST REAR EDGE OF HOOD IN VERTICAL DIRECTION

- Remove the fender.
- Adjust the hood by increasing or decreasing the number of shims as shown.