

REMOVAL


HINT:

After installing the hood on the body, adjust it.

1. REMOVE HOOD SUPPORT FROM HOOD

Remove the bolt and support from the hood.

Torque: 13 N·m (130 kgf-cm, 16 ft-lbf)

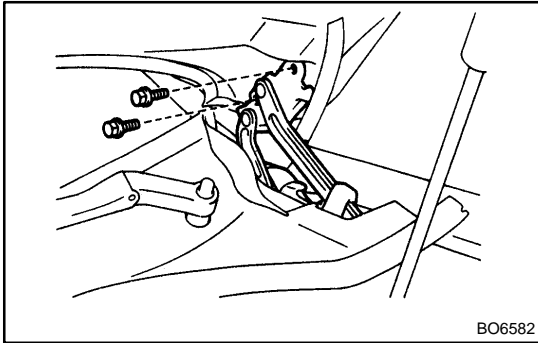

2. REMOVE HOOD

(a) Disconnect the windshield washer hose from the body side.

(b) Remove the 4 bolts and hood.

Torque: 13 N·m (130 kgf-cm, 16 ft-lbf)

NOTICE:

Be careful not to damage the body or glass with the hood end.