

## DISASSEMBLY

### 1. REMOVE LOCK STRIKER

Remove the 2 bolts and striker.

**Torque: 8.3 N·m (85 kgf·cm, 74 in.-lbf)**

### 2. REMOVE CUSHION

### 3. REMOVE NAME PLATE AND EMBLEM