


REMOVAL


1. **REMOVE FLOOR MAT**
2. **REMOVE DOOR STRIKER COVER**

Pull up the cover and remove it.

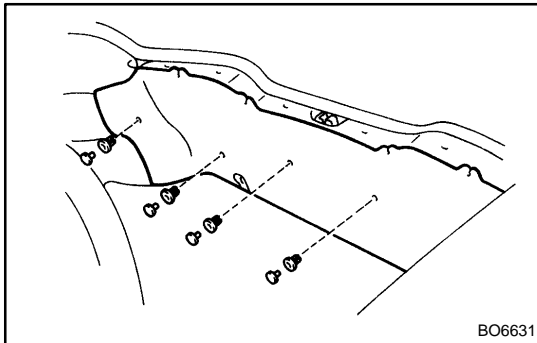


3. **REMOVE TRIM REAR COVER**

- (a) Using a clip remover, remove the 6 clips.
- (b) Pull up the cover to remove it.

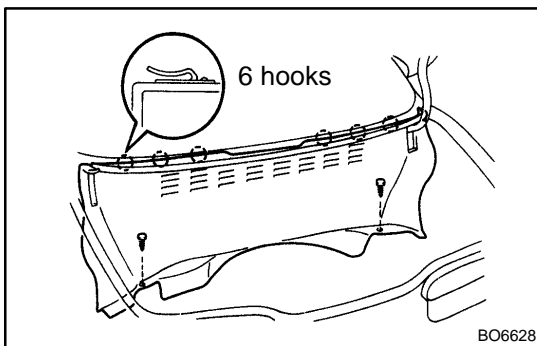


4. **REMOVE TRIM FRONT COVER**

Remove the 2 screws and cover.

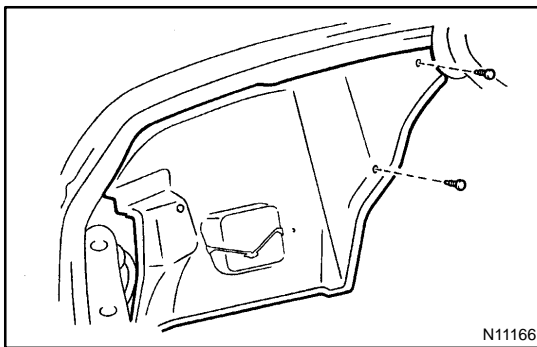


5. **REMOVE LH SIDE COVER**

Using a clip remover, remove the 2 clips and cover.

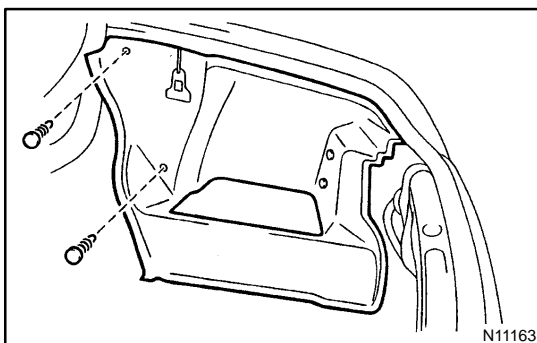


6. **REMOVE RH SIDE COVER**

- (a) Push the plate through to the back of the cover.
- (b) Using a clip remover, remove the 2 clips and cover.

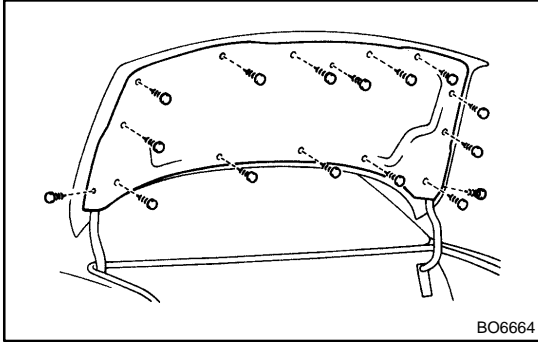


7. REMOVE DOOR TRIM

- (a) Using a clip remover, remove the 16 clips.
- (b) Pull the trim to remove it.

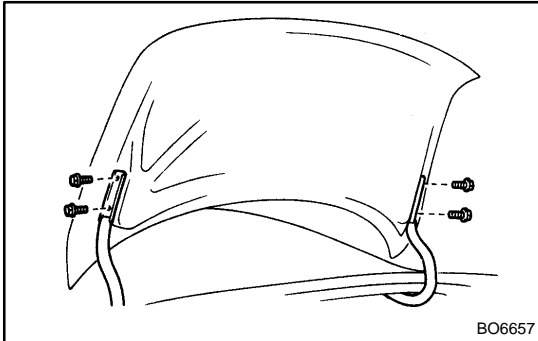

8. REMOVE LUGGAGE COMPARTMENT DOOR

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

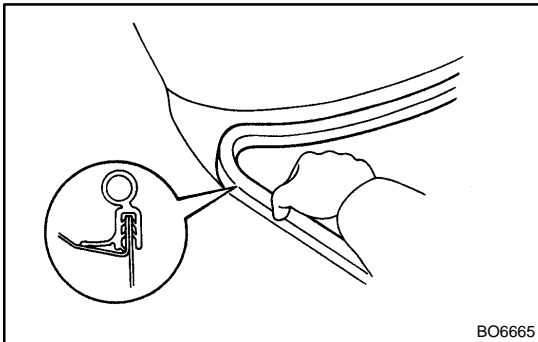

9. REMOVE WEATHERSTRIP

Pull out the weatherstrip by hand and remove it.