


REPLACEMENT

1. REMOVE THESE PARTS:

- (a) Rear seat cushion and seatback
- (b) Roof side inner garnish
- (c) Package tray trim

2. REMOVE LUGGAGE COMPARTMENT DOOR HINGE

- (a) Remove the hinge pin.

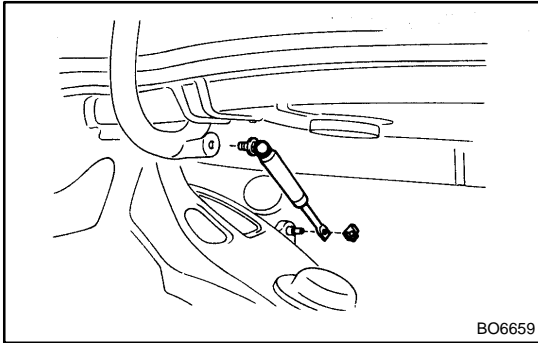

- (b) Remove the clip, loosen the bolt disconnect the door support.

Torque: 22 N·m (225 kgf·cm, 16 ft·lbf)

- (c) Remove the door support.

3. IF NECESSARY, REPLACE DOOR SUPPORT