


## REPLACEMENT

### 1. DISCONNECT OUTSIDE REAR VIEW MIRROR

- (a) Pass the shop rag between the mirror and mirror body to wrap up the mirror in the shop rag.
- (b) Pull up the lower side of the shop rag to disconnect the mirror joint.
- (c) Pull up the mirror and disconnect it.

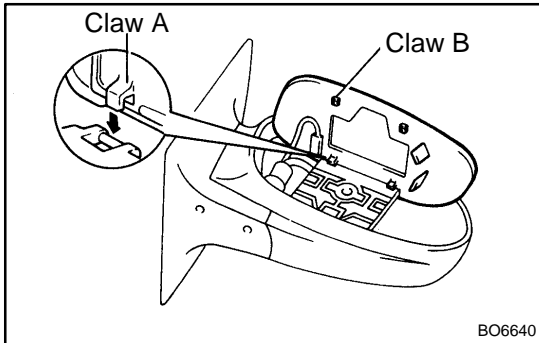

### 2. CONNECT OUTSIDE REAR VIEW MIRROR

- (a) Connect the claws (A) and set the mirror to the mirror body.
- (b) Push the mirror to connect the claws (B) and connect it.