



REMOVAL

1. REMOVE THESE PARTS:

- (a) Rear seat cushion and seatback
- (b) Seat belt shoulder anchor
- (c) Quarter trim and roof side inner garnish

2. REMOVE QUARTER WINDOW GLASS WITH MOULDING

- (a) Remove the window glass from the body with the 4 nuts.
- (b) Remove roof side rail weatherstrip.
- (c) Push the piano wire through from the interior.
- (d) Cut loose the adhesive and remove the glass.

NOTICE:

Do not damage the body.