


## REMOVAL


### 1. REMOVE THESE PARTS:

- (a) Floor mat
- (b) Door striker cover
- (c) Trim rear cover
- (d) Trim front cover
- (e) LH side cover
- (f) RH side cover

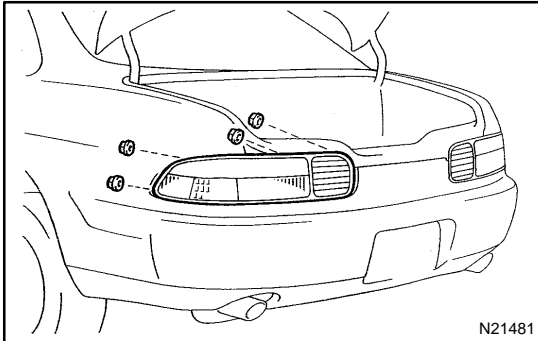

### 2. REMOVE REAR COMBINATION LIGHT

- (a) Remove the 4 nuts and disconnect the connector.
- (b) Remove the rear combination light.

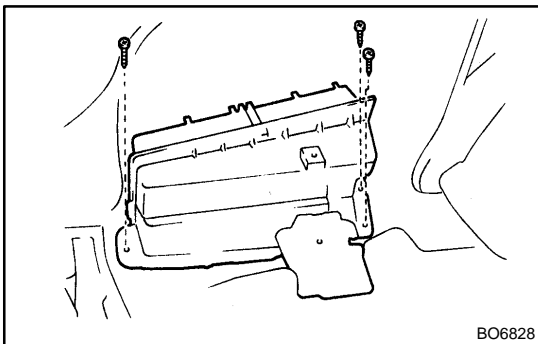



### 3. REMOVE VENTILATION DUCT

Remove the 3 screws and ventilation duct.


### 4. REMOVE REAR BUMPER COVER

- (a) Remove the 4 screws, 12 nuts and 14 clips.
- (b) Remove the bumper cover.

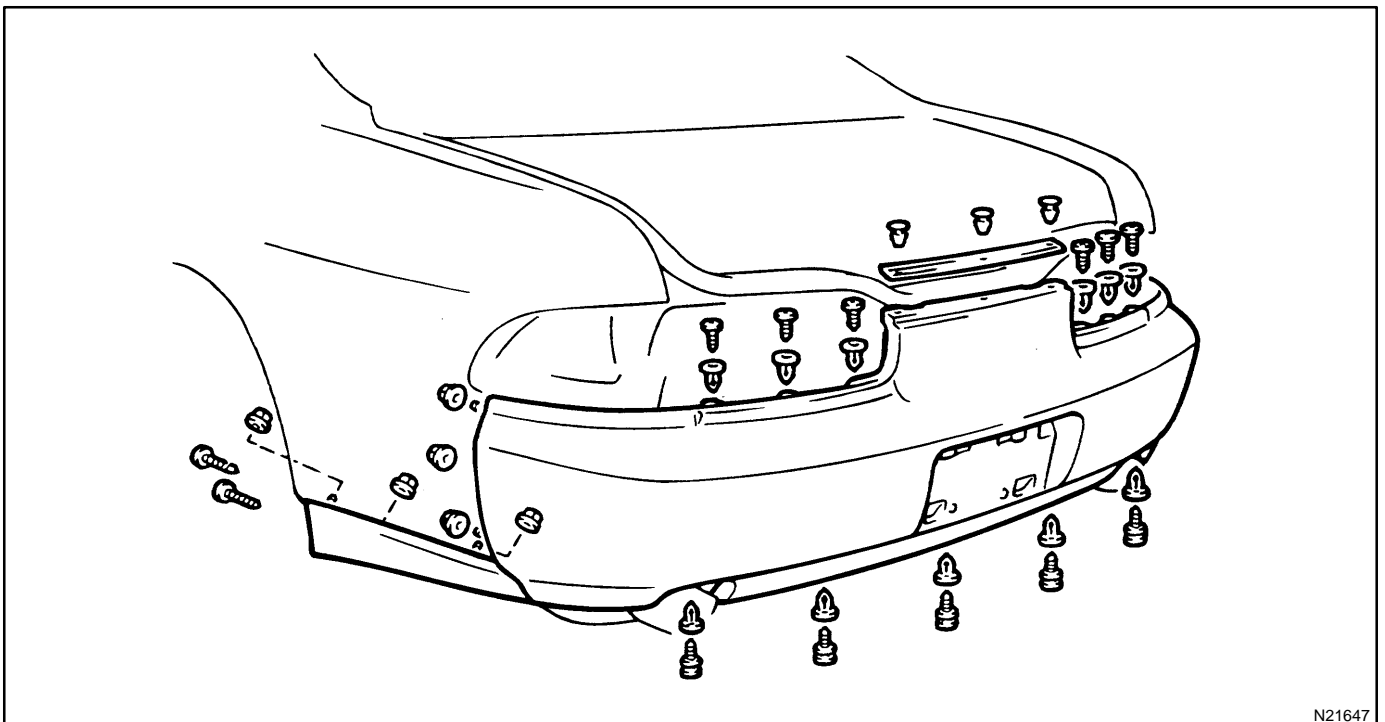

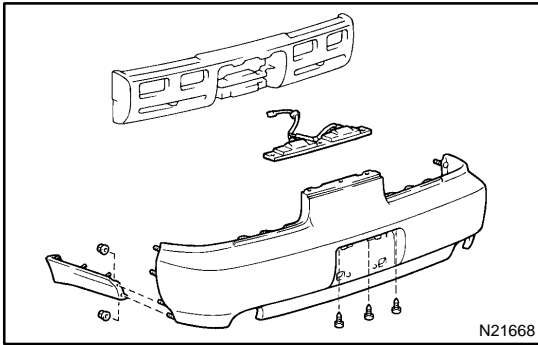**5. REMOVE LICENSE LIGHT AND BUMPER EXTENSION**

- (a) Remove the bumper energy absorber from the bumper cover.
- (b) Remove the 3 screws and light.
- (c) Remove the 2 nuts and bumper extension.

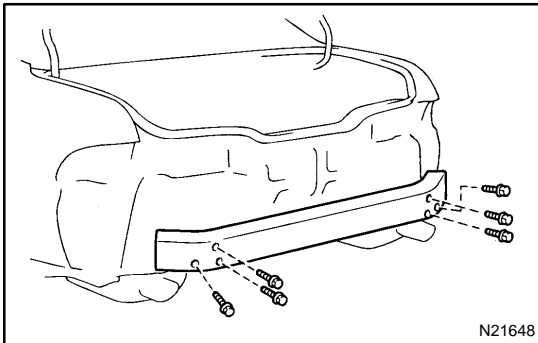**6. REMOVE BUMPER REINFORCEMENT**

Remove the 6 bolts and reinforcement.

**Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)**