


## DISASSEMBLY


### 1. REMOVE SEAT CUSHION COVER

Remove hog rings and cover.

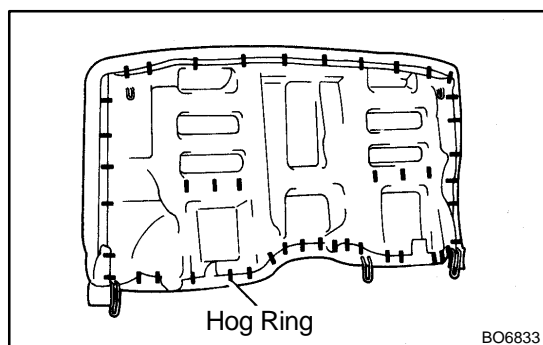

### 2. REMOVE SEATBACK COVER

Remove hog rings and cover.

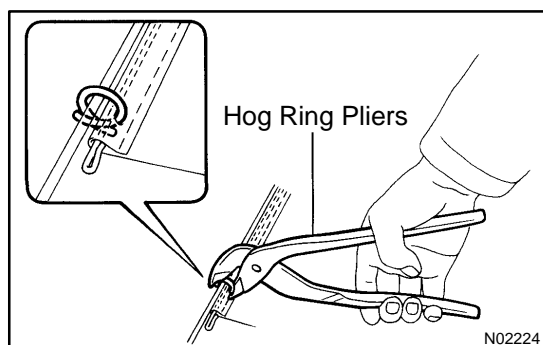

### HINT:

At the time of reassembly, please refer to the following items.

- Using hog ring pliers, install the new hog ring.
- If creases occur in the front seat, stretch out the creases by heating them with a dryer, etc.

If the creases still cannot be removed, spray them lightly with a vaporizer before applying the hair dryer again.