


REMOVAL

1. REMOVE REAR SEAT CUSHION

Pull up the seat cushion to remove it.

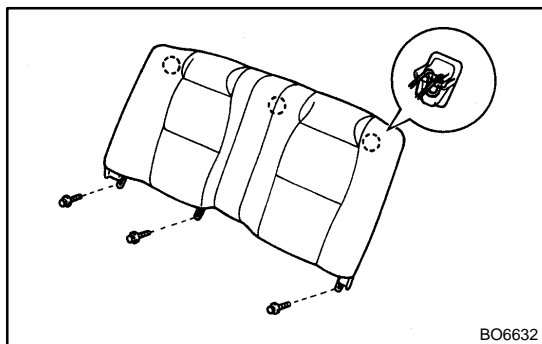

2. REMOVE REAR SEATBACK

(a) Remove the 3 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(b) Pull up the seatback to remove it.