


REMOVAL


1. REMOVE THESE PARTS:

- (a) Assist grip
- (b) Front pillar garnish
- (c) Sun visor
- (d) Center visor
- (e) Rear seat cushion and seatback
- (f) Front seat outer belt

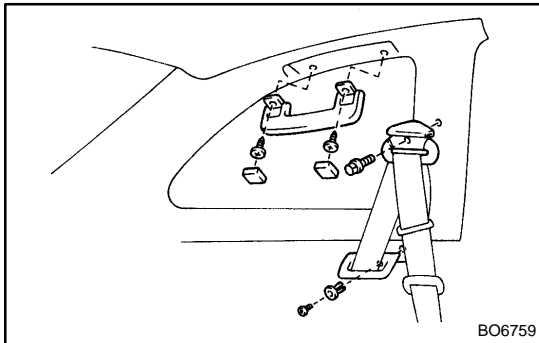


2. REMOVE QUARTER TRIM AND ASSIST GRIP

- (a) Remove the 2 caps, 2 screws and assist grip.
- (b) Remove the clip and belt guide.
- (c) Remove the bolt and front seat belt anchor.

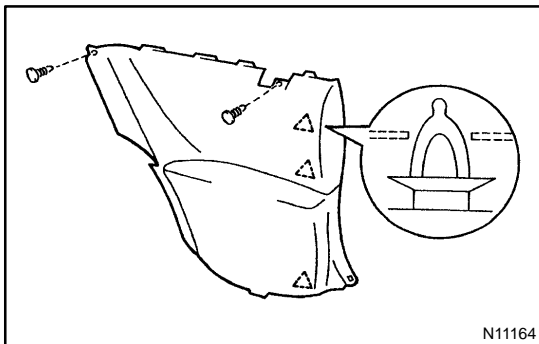


- (d) Using a clip remover, remove the 2 clips.
- (e) Pass a screwdriver between the retainers and quarter trim to pry it loose.
- (f) Remove the quarter trim.

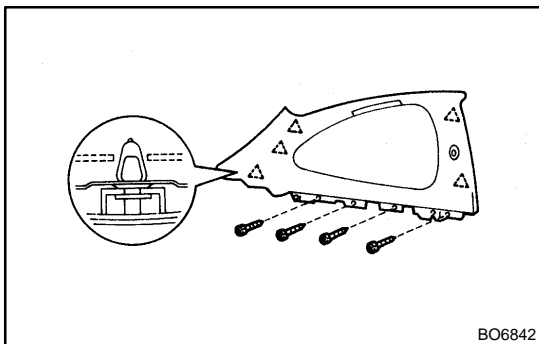

3. REMOVE ROOF SIDE INNER GARNISH


- (a) Remove the 4 screws.
- (b) Pass a screwdriver between the retainers and inner garnish to pry it loose.
- (c) Remove the inner garnish.

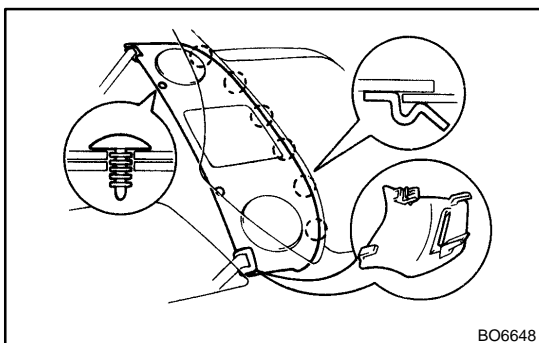

4. REMOVE PACKAGE TRAY TRIM

- (a) Using a clip remover, remove the 2 clips.
- (b) Pull the belt guide forward to remove it.
- (c) Pull the trim forward to remove it.

5. REMOVE ROOM PARTITION TRIM

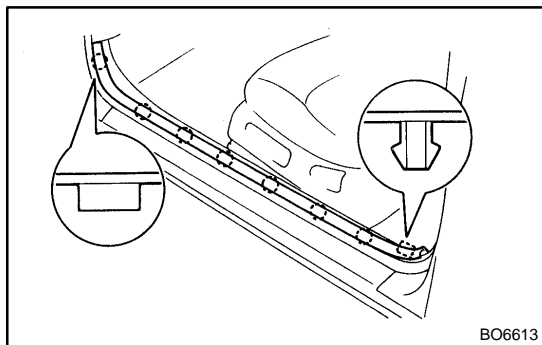


BO6613

6. REMOVE FRONT SCUFF PLATE

Using a screwdriver, remove the plate.

HINT:

Tape the screwdriver tip before use.

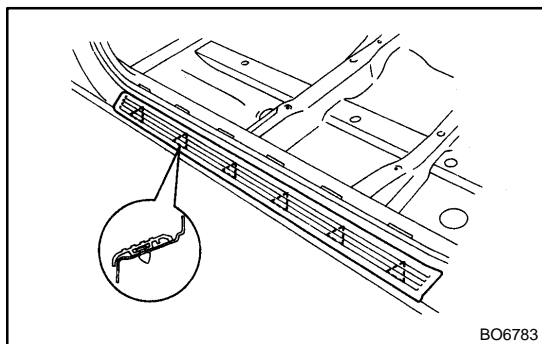


BO6783

7. REMOVE OUTSIDE SCUFF PLATE

Pass a screwdriver between the retainers and the plate to pry it loose.

HINT:


Tape the screwdriver tip before use.

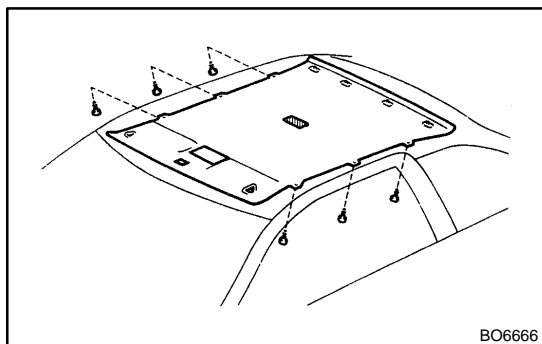

BO6666

8. REMOVE ROOF HEADLINING

- Remove the interior light.
- Disconnect the 4 clips from the roof panel rear end.
- Using a clip remover, remove 6 clips.
- Release the fastener tapes, then remove the headlining.

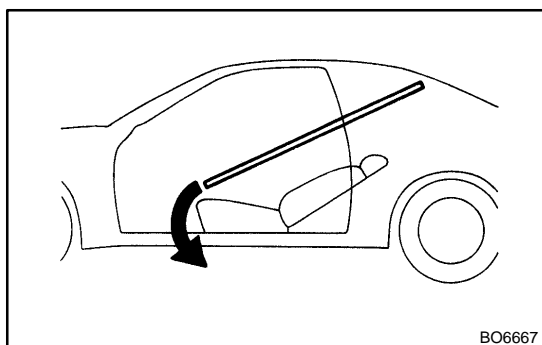

BO6667

- Fully recline the front seatback.
- Bring out the headlining as shown.

NOTICE:

Do not fold down the headlining.

HINT:

At the time of installation, please refer to the following item.

Install the roof headlining parts by following removal sequence in reverse.