

SEAT BELT PRETENSIONER REMOVAL


BO14M-01

CAUTION:

When removing the seat belt pretensioner, always place it on a flat and stable surface.

NOTICE:


- If the seat belt pretensioner has been dropped or damaged, replace it with a new one.
- Never install a seat belt pretensioner which has been used in another vehicle. When replacing a seat belt pretensioner, always install a new one.

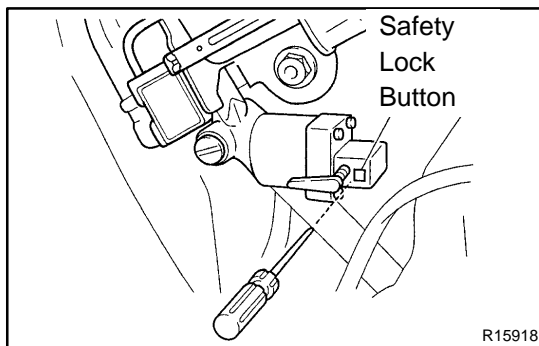**1. REMOVE THESE PARTS:**


- Rear seat cushion
- Rear seatback
- Quarter trim

2. REMOVE FRONT SEAT OUTER BELT


- Lock the sensor by pushing in the safety lock button with a screwdriver.

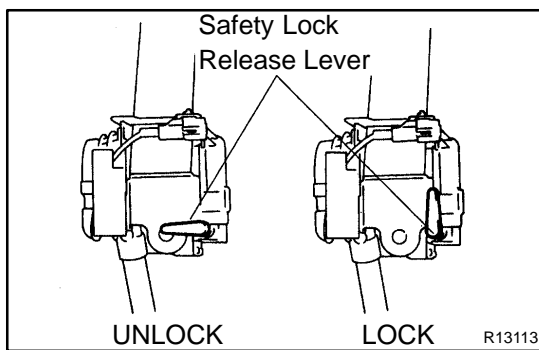

- Turn the safety lock release lever as shown in the illustration.

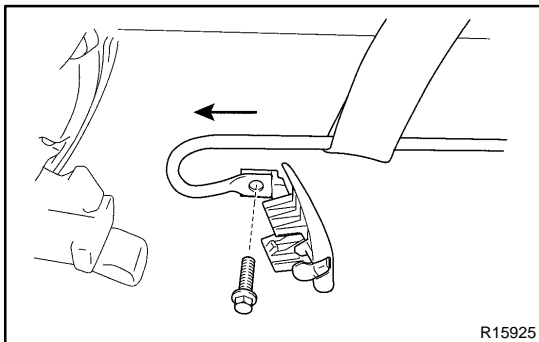

- Remove the bolt and sill-bar.

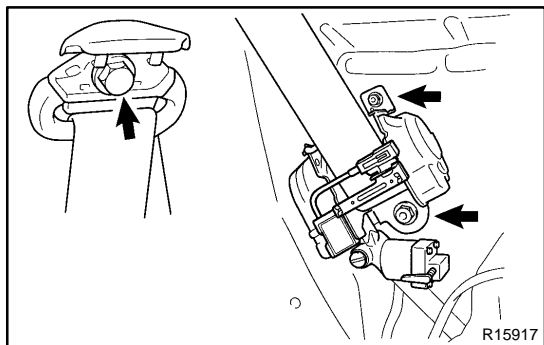

- (d) Remove the 2 bolts, and front seat outer belt retractor.
- (e) Remove front seat belt shoulder anchor bolt.

3. INSTALL FRONT SEAT OUTER BELT

- (a) Front seat outer belt retractor

Torque:

Upper Bolt: 7.5 N·m (76 kgf-cm, 66 in.-lbf)


Lower Bolt: 42 N·m (430 kgf-cm, 31 ft-lbf)

- (b) Front seat belt shoulder anchor bolt

Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)

- (c) Sill-bar

Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)

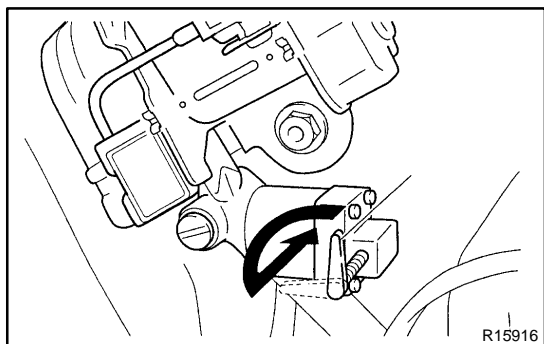

- (d) Unlock the sensor by operating in the safety lock release lever as shown in the illustration.

NOTICE:

You cannot install the center pillar garnish unless the sensor is unlocked.

4. INSTALL THESE PARTS:

- (a) Quarter trim
- (b) Rear seatback
- (c) Rear seat cushion