



SLIDING ROOF ON-VEHICLE INSPECTION

BO13T-03

INSPECT SLIDING ROOF GLASS ALIGNMENT

- (a) Start the engine and check the operation time of the sliding roof.

Operation time:

Approx. 5 sec.

- (b) Check for abnormal noises or binding during operation.
 (c) With the sliding roof fully closed, check for water leakage.
 (d) Check for a difference in level between the sliding roof weatherstrip and roof panel.

Front end:

$-1 \pm 1.5 \text{ mm } (-0.039 \pm 0.06 \text{ in.})$

Rear end:

$0 \pm 1.5 \text{ mm } (0 \pm 0.06 \text{ in.})$

If the sliding roof does not operate:

- (e) Remove the control switch cover.
 (f) Remove the large screw inside.

NOTICE:

Be careful not to lose the spring washer or shim.

- (g) Manually operate the sliding roof by inserting a special crank-shaped screwdriver into the hole and turning the drive shaft.