



REMOVAL

1. REMOVE DOOR TRIM
2. REMOVE REAR SPOILER

Disconnect the connector, remove the 5 nuts and spoiler.