


REMOVAL

1. REMOVE FRONT FENDER WHEEL OPENING MOULDING

Remove the 7 screws and moulding.

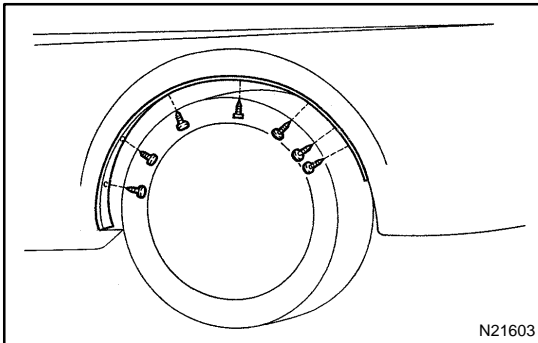

2. REMOVE QUARTER WHEEL OPENING MOULDING

Remove the 7 screws and moulding.