



REPLACEMENT

REPLACE FASTENER

- (a) Remove the damaged fastener.
- (b) Cut off the old adhesive around the fastener installation area.

NOTICE:

Be careful not to damage the body.

- (c) Clean the installation area.
- (d) Install the new fastener onto the body.

HINT:

Before installing, peel off the backing paper at the fastener. Install the fastener with the atmospheric temperature between 20 – 40°C (68 – 104°F).