



REMOVAL

1. DISCONNECT BRAKE LINES

Using SST, disconnect the brake lines from the ABS & TRAC actuator.

SST 09751-36011

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

2. REMOVE ABS & TRAC ACTUATOR ASSEMBLY

(a) Disconnect the 2 connectors.

(b) Remove the bolt, 3 nuts and ABS & TRAC actuator assembly.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

3. REMOVE ABS & TRAC ACTUATOR

(a) Remove the 2 nuts and ABS & TRAC actuator.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

(b) Remove the 2 cushion bolts and 3 cushions.