



## REMOVAL

### 1. REMOVE FOLLOWING PARTS:

- (a) Master cylinder (See page [BR-9](#))
- (b) Vacuum hose, clip and return spring

### 2. REMOVE BRAKE BOOSTER

- (a) Remove the 4 booster installation nuts and clevis.
- (b) Remove the booster and gasket.