

## PARKING BRAKE LEVER ON-VEHICLE INSPECTION


BR0ML-01

### 1. CHECK PARKING BRAKE LEVER TRAVEL

Pull the parking brake lever all the way up, and count the number of clicks.

**Parking brake lever travel at 196 N (20 kgf, 44.1 lbf):  
5 – 8 clicks**

If incorrect, adjust the parking brake.

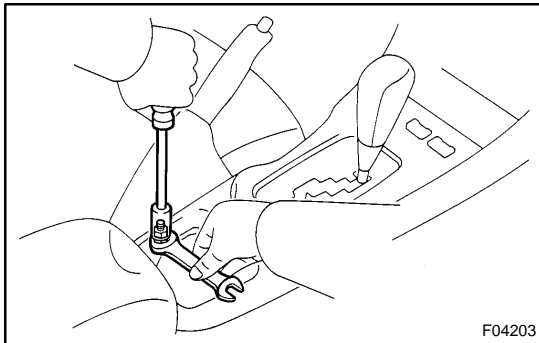

### 2. IF NECESSARY, ADJUST PARKING BRAKE

#### HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted.

For shoe clearance adjustment, see page [BR-42](#).

- (a) Remove the cup holder.
- (b) Using a socket driver and spanner wrench, remove the adjusting lock nut.

#### HINT:

Tape the socket driver before use.

- (c) Turn the adjusting nut until the lever travel is correct.
- (d) Install the adjusting lock nut.
- (e) Using a socket driver and spanner wrench, tighten the adjusting lock nut.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

- (f) Install the cup holder.

