

## REMOVAL

### 1. DISCONNECT FLEXIBLE HOSE


- (a) Remove the union bolt and 2 gaskets from the caliper, then disconnect the flexible hose from the caliper.

**Torque: 30 N·m (310 kgf-cm, 22 ft-lbf)**

#### HINT:

At the time of installation, please refer to the following item.  
Install the flexible hose lock securely in the lock hole in the caliper.

- (b) Use a container to catch the brake fluid as it drains out.

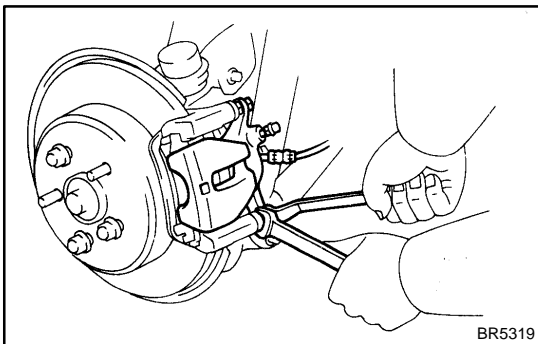

### 2. REMOVE CALIPER

- (a) Hold the sliding pin and loosen the 2 installation bolts.

**Torque: 34 N·m (350 kgf-cm, 25 ft-lbf)**

- (b) Remove the 2 installation bolts.
- (c) Remove the caliper from the torque plate.

### 3. REMOVE 2 ANTI-SQUEAL SPRINGS AND 2 BRAKE