



REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the side cover of the luggage compartment.
- (b) Disconnect the speed sensor connector, and pull off the sensor wire harness with the grommet.

2. REMOVE SPEED SENSOR

- (a) Remove the 2 clamp bolts and nuts holding the sensor harness to the body and upper arm.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

- (b) Remove the speed sensor from the axle carrier.

Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)