


## INSTALLATION

### 1. INSTALL GENERATOR

- (a) Install the generator and transmission oil cooler bracket with the bolt and nut.

**Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)**

- (b) Connect the generator connector.
- (c) Connect the generator wire with the nut and rubber cap.

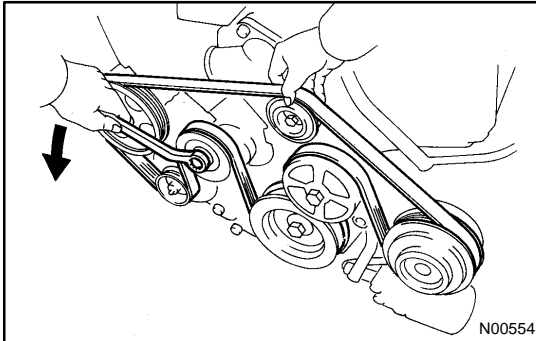

### 2. INSTALL GENERATOR DRIVE BELT

Install the drive belt by turning the drive belt tensioner counter-clockwise.

HINT:

The pulley bolt for the belt tensioner has a left – hand thread.

### 3. PERFORM ON-VEHICLE INSPECTION

(See page [CH-2](#))

- 4. INSTALL ENGINE UNDER COVER
- 5. INSTALL BATTERY CLAMP COVER